

Ryhmä: 530


LM-22A MEAT MINCER

Code	Item name
LM22A001	LM-22A GRINDING HOUSE CAST IRON
LM22A001,1	LM-22A GRINDING HOUSE STAINLESS
LM22A002	LM-22A FRONT PLATE
LM22A003	LM-22A FEED SCREW (INCL.PART 5) ALUM
LM22A003,1	LM-22A FEED SCREW (INCL.PART 5) STAI
LM22A004	LM-22A KNIFE
LM22A005	LM-22A STUD
LM22A006	LM-22A HOLEPLATE
LM22A007	LM-22A ENTRY NUT
LM22A008	LM-22A SPLASH COVER
LM22A009	LM-22A SPLASH COVER BRACKET
LM22A010	LM-22A COVER FOR MIXER SHAFT
LM22A011	LM-22A CLAMPING SCREW FOR MIXER
LM22A012	LM-22A NYLON BEARING
LM22A014	LM-22A LOCK NUT
LM22A015	LM-22A MIXER
LM22A016	LM-22A LID BOLT
LM22A018	LM-22A PROTECTIVE PLATE
LM22A019	LM-22A LOCK NUT KM 6
LM22A020	LM-22A BEARING 3306
LM22A021	LM-22A DRIVE SHAFT
LM22A022	LM-22A BEARING TRESTLE
LM22A023	LM-22A BEARING 6306 2RS
LM22A024	LM-22A SPROCKET Z 14
LM22A025	LM-22A BUSHING
LM22A026	LM-22A CHAIN 08B-1
LM22A027	LM-22A BACK COVER
LM22A029	LM-22A MEAT TRAY
LM22A035	LM-22A SPROCKET Z 76
LM22A038	LM-22A NYLON BEARING
LM22A039	LM-22A SAFETY SWITCH
LM22A043	LM-22A TABLE
LM22A044	LM-22A STOP RUBBER
LM22A047	LM-22A WHEEL WITH BRAKE
LM22A048	LM-22A WHEEL
LM22A054	LM-22A PUSHER FOR SAFETY SWITCH
LM22A056	LM-22A SPRING
LM22A057	LM-22A MOTOR 3 kW
LM22A060	LM-22A PULLEY
LM22A061	LM-22A PULLEY
LM22A062	LM-22A BELT XPZ 850
LM22A063	LM-22A GEARBOX
LM22A064	LM-22A TURNBUCKLE
LM22A065	LM-22A HINGE SHAFT
LM22A066	LM-22A BEARING
LM22A067	LM-22A LID
LM22A082	LM-22A SHIM FOR FEED SCREW
LM22A083	LM-22A KEY
LM22A084	LM-22A GASKET AS 28x40x7
LM22A085	LM-22A KEY FOR DRIVE SHAFT
LM22A086	LM-22A KEY
LM22A087	LM-22A LID BOLT
LM22A088	LM-22A EMERGENCY STOP BUTTON
LM22A089	LM-22A PROTECTIVE RUBBER
LM22A090	LM-22A START BUTTON
LM22A091	LM-22A STOP BUTTON
LM22A092	LM-22A CABLE GLAND
LM22A093	LM-22A CABLE
LM22A094	LM-22A PLUG
LM22A095	LM-22A CONNECTION BOX
LM22A096	LM-22A RAIL

Ryhmä: 530


LM-22A MEAT MINCER

Code	Item name
LM22A097	LM-22A CONTACTOR DILM 9-10 24V
LM22A098	LM-22A THERMAL OVERLOAD RELAY ZB
LM22A099	LM-22A RUBBER
LM22A100	LM-22A LOCK NUT KM 15
LM22A101	LM-22A DRIVE SHAFT FOR MIXER
LM22A102	LM-22A KEY
LM22A103	LM-22A BEARING UNIT
LM22A104	LM-22A CIRCLIP
LM22A105	LM-22A STAND FOR BEARING UNIT
LM22A106	LM-22A GASKET AS 35x52x10
LM22A107	LM-22A GASKET A 53x68x10
LM22A108	LM-22A MIXING SHAFT KEY
LM22A109	LM-22A ENTRY NUT KEY
LM22A110	LM-22A KEY FOR FEED SCREW
LM22A111	LM-22A KEY SWITCH FOR FOOT SWITCH
LM22A112	LM-22A FOOT SWITCH
LM22A113	LM-22A MICROSWITCH ,FOOT SWITCH SU
LM22A114	LM-22A TRANSFORMER
LM22A115	LM-22A KEY
LM22A116	LM-22A CASING
LM22A150	LM-22A BEARING TRESTLE COMP.PARTS

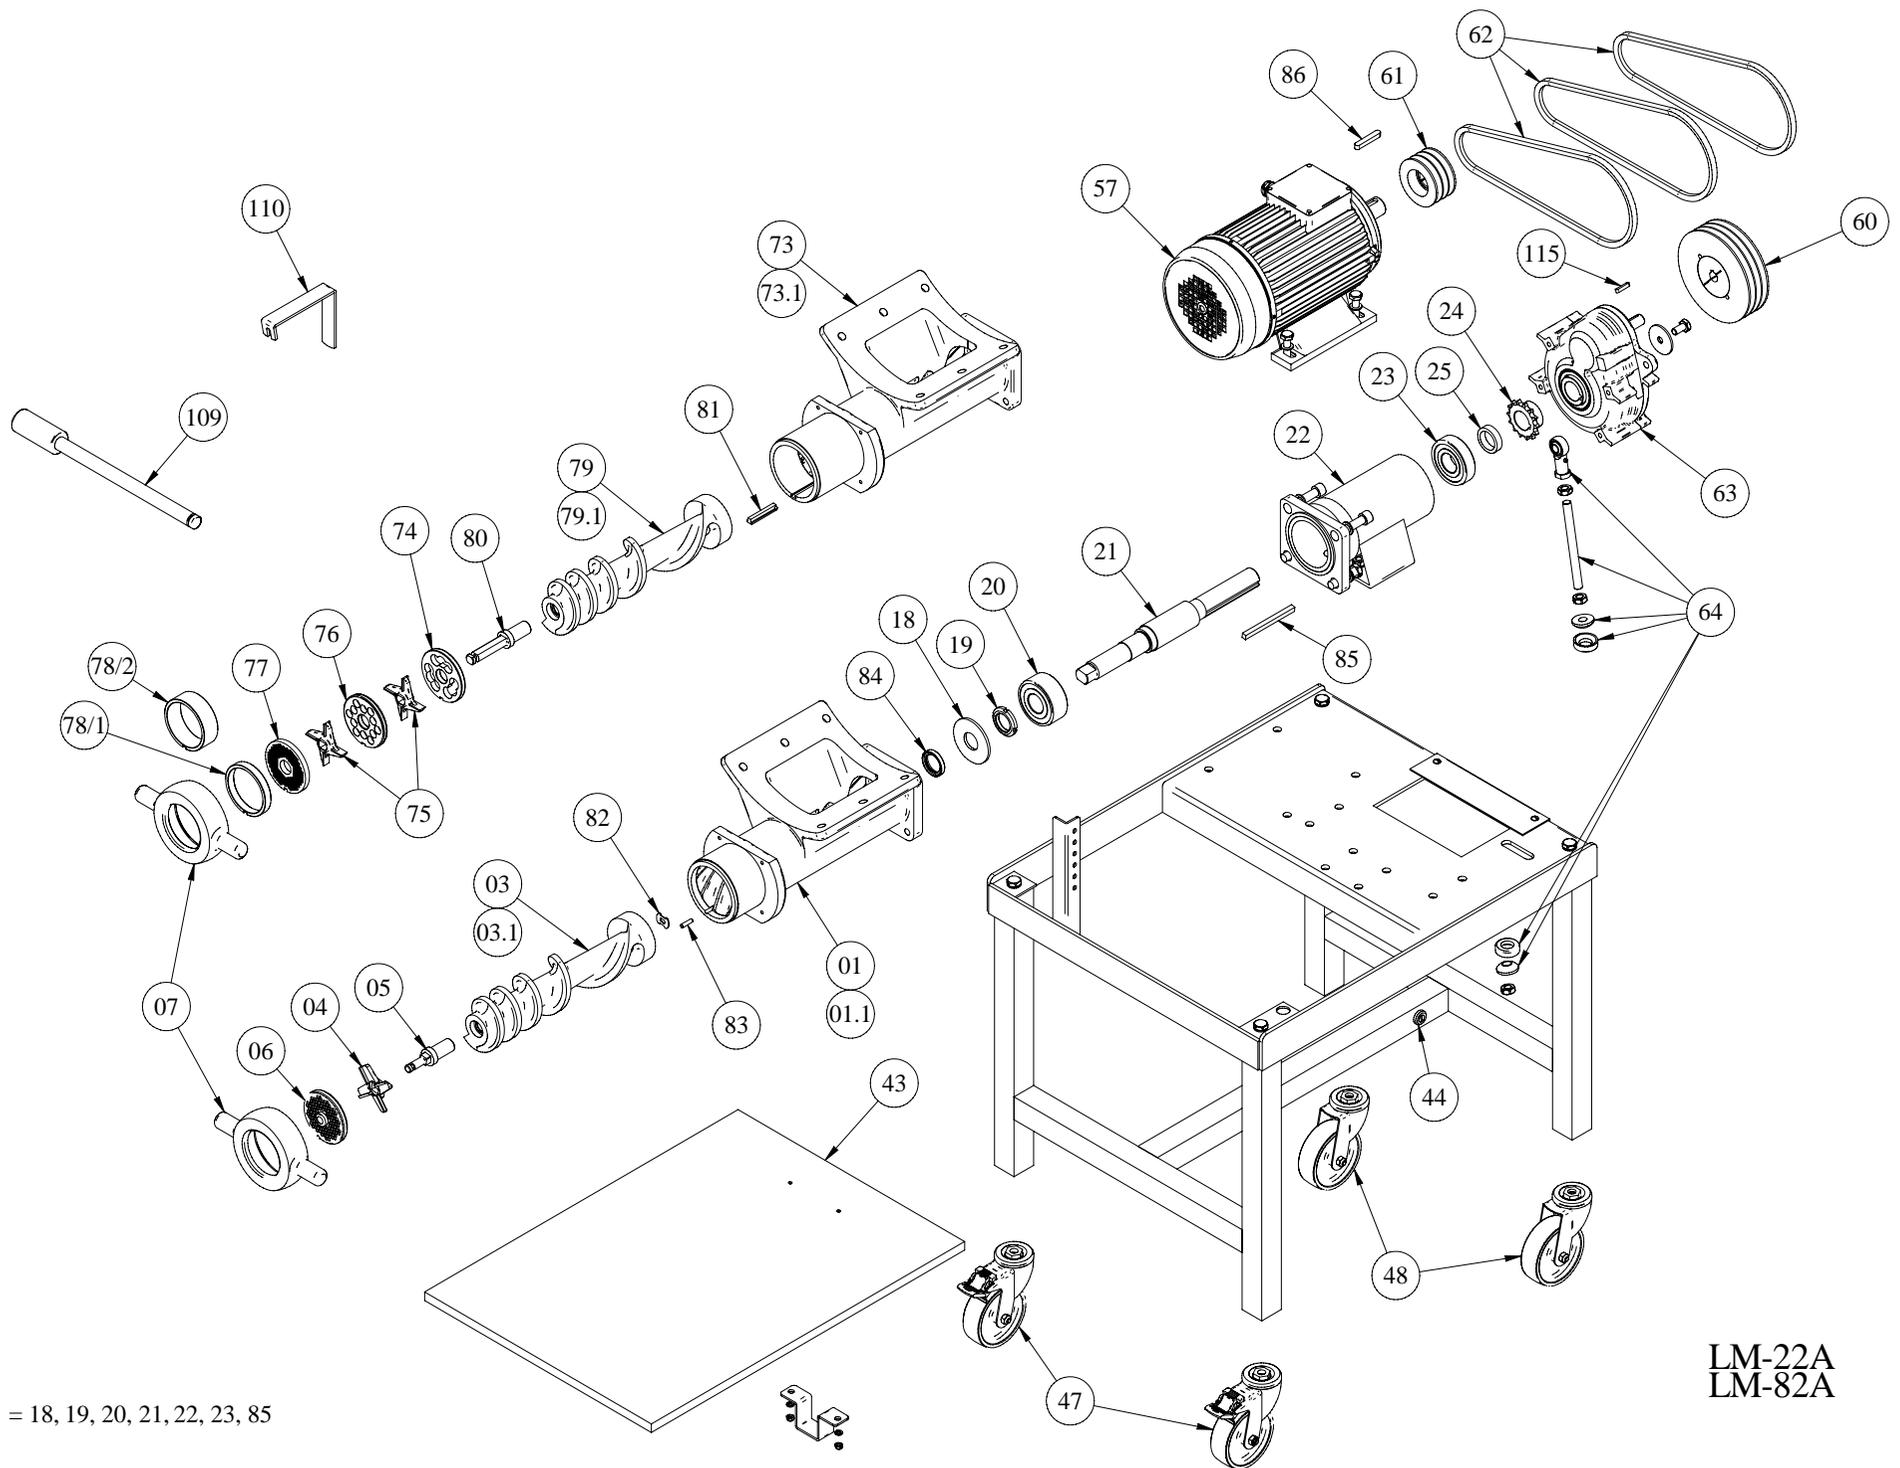


150 = 18, 19, 20, 21, 22, 23, 85

LM-22A
LM-82A

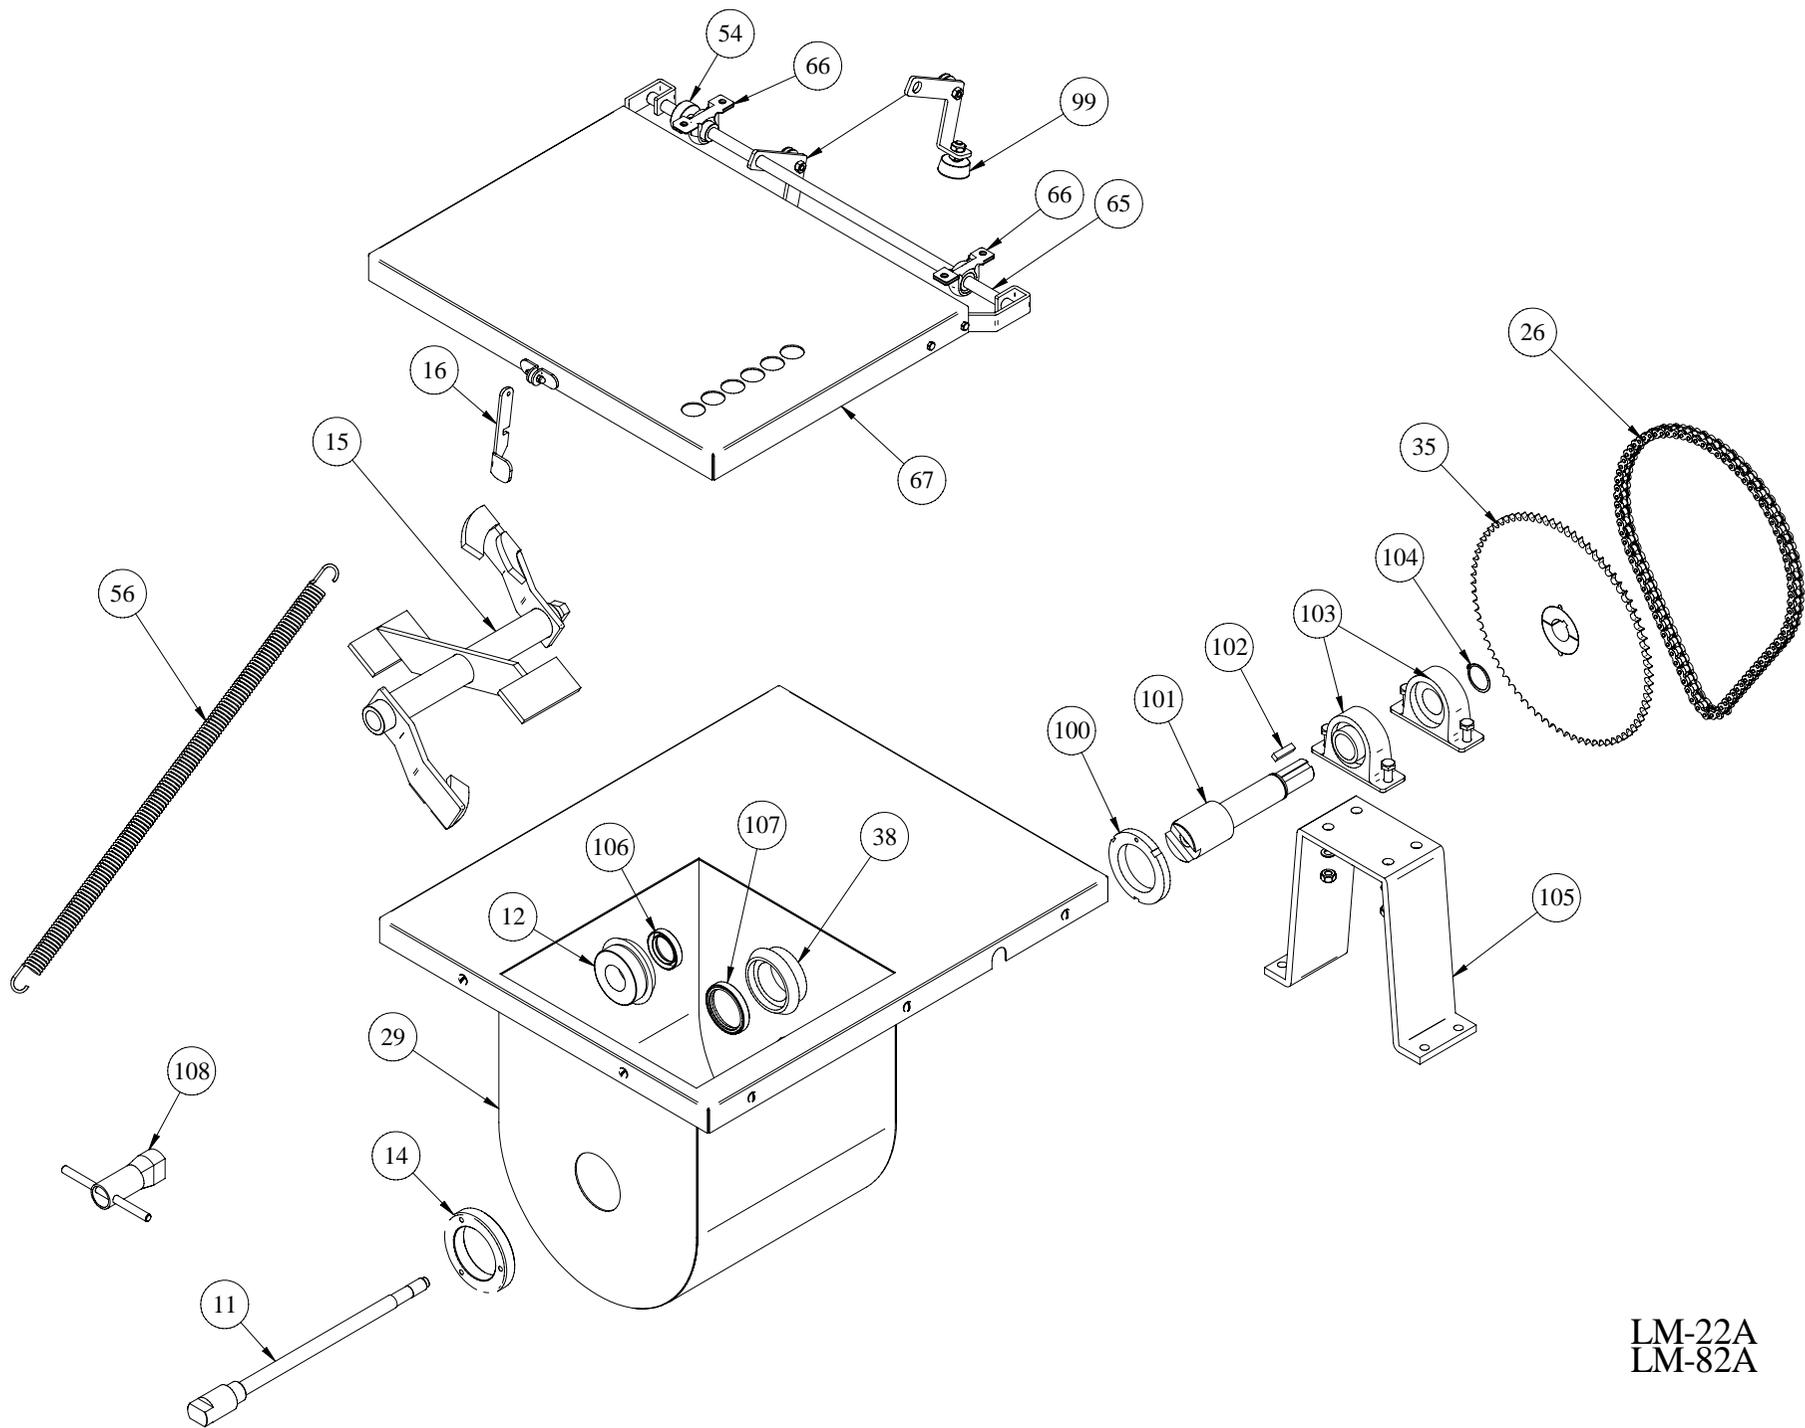

LM-22A
LM-82A

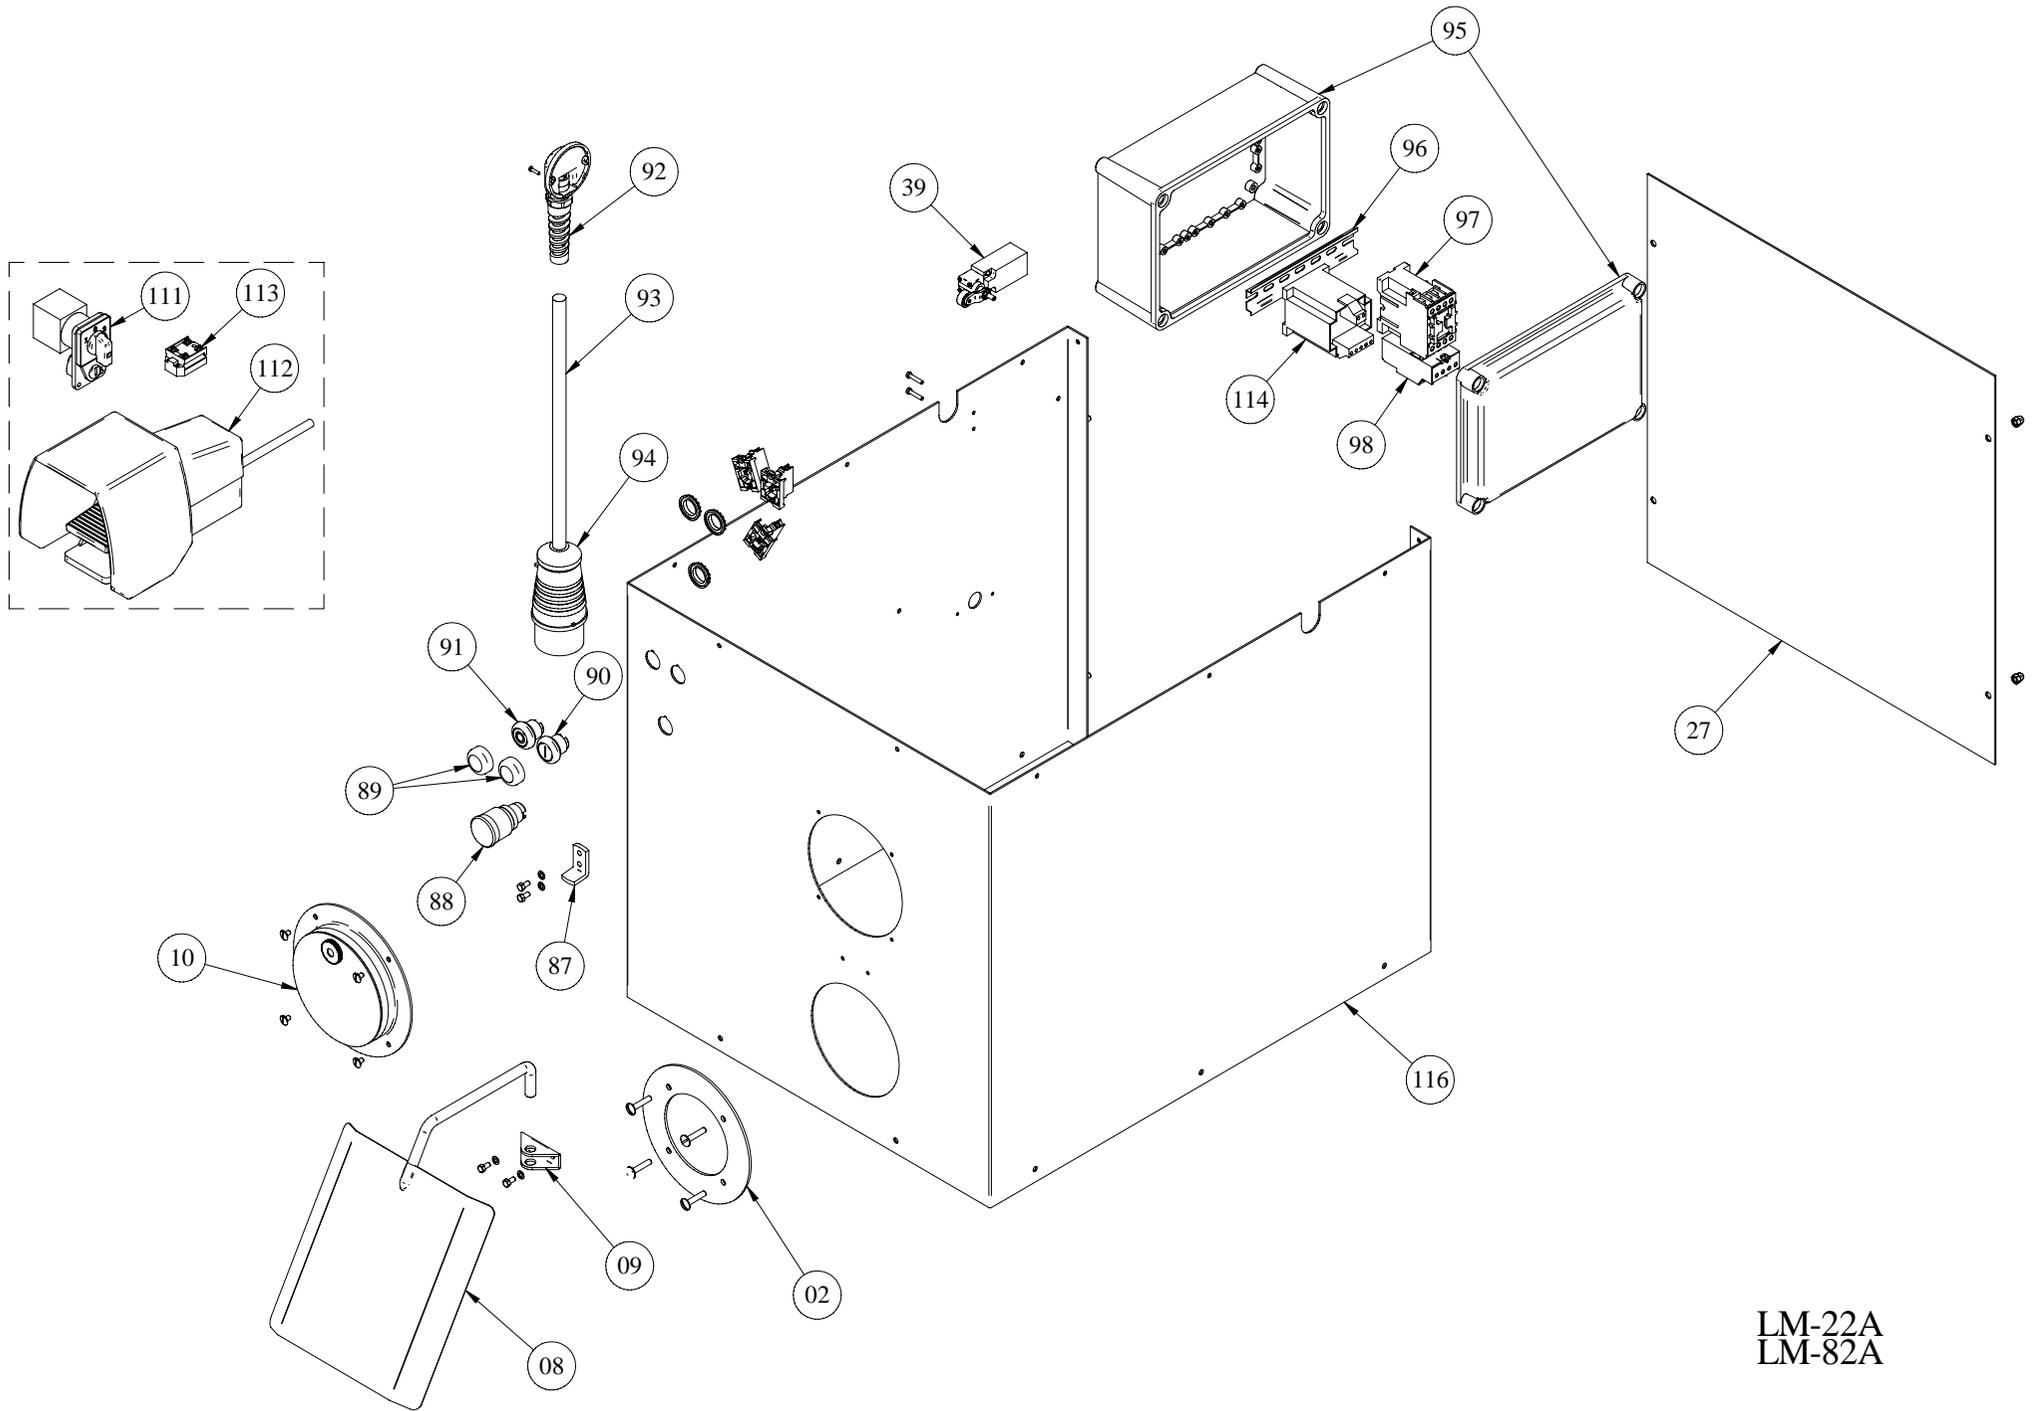

LM-22A
LM-82A