

Ryhmä: 540

LM-32A MEAT MINCER


Code	Item name
LM32A001	LM-32A GRINDING HOUSE CAST IRON
LM32A001,1	LM-32A GRINDING HOUSE STAINLESS
LM32A002	LM-32A FEED SCREW (INCL.PART 6) ALUM
LM32A002,1	LM-32A FEED SCREW (INCL.PART 6) STAI
LM32A003	LM-32A ENTRY NUT
LM32A004	LM-32A KNIFE
LM32A005	LM-32A HOLEPLATE
LM32A006	LM-32A STUD
LM32A015	LM-32A GASKET AS 30x40x7
LM32A016	LM-32A BEARING TRESTLE
LM32A017	LM-32A PROTECTIVE PLATE
LM32A018	LM-32A DRIVE SHAFT
LM32A020	LM-32A BEARING 3307
LM32A026	LM-32A GEARBOX
LM32A027	LM-32A BUSHING
LM32A028	LM-32A BEARING 6307 2RS
LM32A032	LM-32A WHEEL
LM32A034	LM-32A FRONT PLATE
LM32A037	LM-32A WHEEL WITH BRAKE
LM32A044	LM-32A LOCK NUT KM 15
LM32A045	LM-32A NYLON BEARING
LM32A047	LM-32A DRIVE SHAFT FOR MIXER
LM32A050	LM-32A SHAFT FOR MIXER
LM32A051	LM-32A MIXER
LM32A052	LM-32A LID
LM32A053	LM-32A MEAT TRAY
LM32A054	LM-32A LID BOLT
LM32A056	LM-32A LID BOLT
LM32A057	LM-32A NYLON BEARING
LM32A058	LM-32A LOCK NUT
LM32A060	LM-32A COVER FOR MIXER SHAFT
LM32A063	LM-32A SPLASH COVER BRACKET
LM32A064	LM-32A SPLASH COVER
LM32A065	LM-32A PUSHER FOR SAFETY SWITCH
LM32A066	LM-32A SAFETY SWITCH
LM32A079	LM-32A CONNECTION BOX
LM32A086	LM-32A COVER FOR CONNECTION BOX
LM32A096	LM-32A PULLEY
LM32A101	LM-32A HINGE SHAFT
LM32A104	LM-32A SPRING
LM32A109	LM-32A BELT XZP-950
LM32A110	LM-32A MOTOR 3kW
LM32A111	LM-32A PULLEY
LM32A114	LM-32A HINGE BEARING
LM32A127	LM-32A KEY
LM32A129	LM-32A LOCK NUT KM 7
LM32A130	LM-32A KEY
LM32A131	LM-32A KEY
LM32A132	LM-32A KEY
LM32A133	LM-32A TURNBUCKLE
LM32A134	LM-32A KEY
LM32A135	LM-32A FLANE
LM32A136	LM-32A GASKET AS 35x52x10
LM32A137	LM-32A GASKET A 53x68x10
LM32A140	LM-32A MOTOR FOR MIXER 1,1kW
LM32A141	LM-32A EMERGENCY STOP BUTTON
LM32A142	LM-32A START BUTTON
LM32A143	LM-32A STOP BUTTON
LM32A147	LM-32A PROTECTIVE RUBBER
LM32A148	LM-32A RAIL
LM32A149	LM-32A CONTACTOR DILM 9-10 24V

Ryhmä: 540


LM-32A MEAT MINCER

Code	Item name
LM32A150	LM-32A THERMAL OVERLOAD RELAY ZB
LM32A150,1	LM-32A THERMAL OVERLOAD RELAY MIXER
LM32A151	LM-32A BACK COVER
LM32A152	LM-32A COVER
LM32A153	LM-32A GEARBOX FOR MIXER
LM32A155	LM-32A SHIM FOR FEED SCREW
LM32A156	LM-32A CABLE GLAND
LM32A157	LM-32A CABLE
LM32A158	LM-32A PLUG
LM32A159	LM-32A RUBBER
LM32A160	LM-32A FOOT SWITCH
LM32A161	LM-32A KEY SWITCH FOR FOOT SWITCH
LM32A162	LM-32A MICROSWITCH FOOT SWITCH SU
LM32A163	LM-32A MIXING SHAFT KEY
LM32A164	LM-32A ENTRY NUT KEY
LM32A165	LM-32A KEY FOR FEED SCREW
LM32A166	LM-32A TRANSFORMER
LM32A167	LM-32A CASING
LM32A200	LM-32A BEARING TRESTLE COMPL. 16-18,


200 = 16, 17, 18, 20, 28, 129, 130

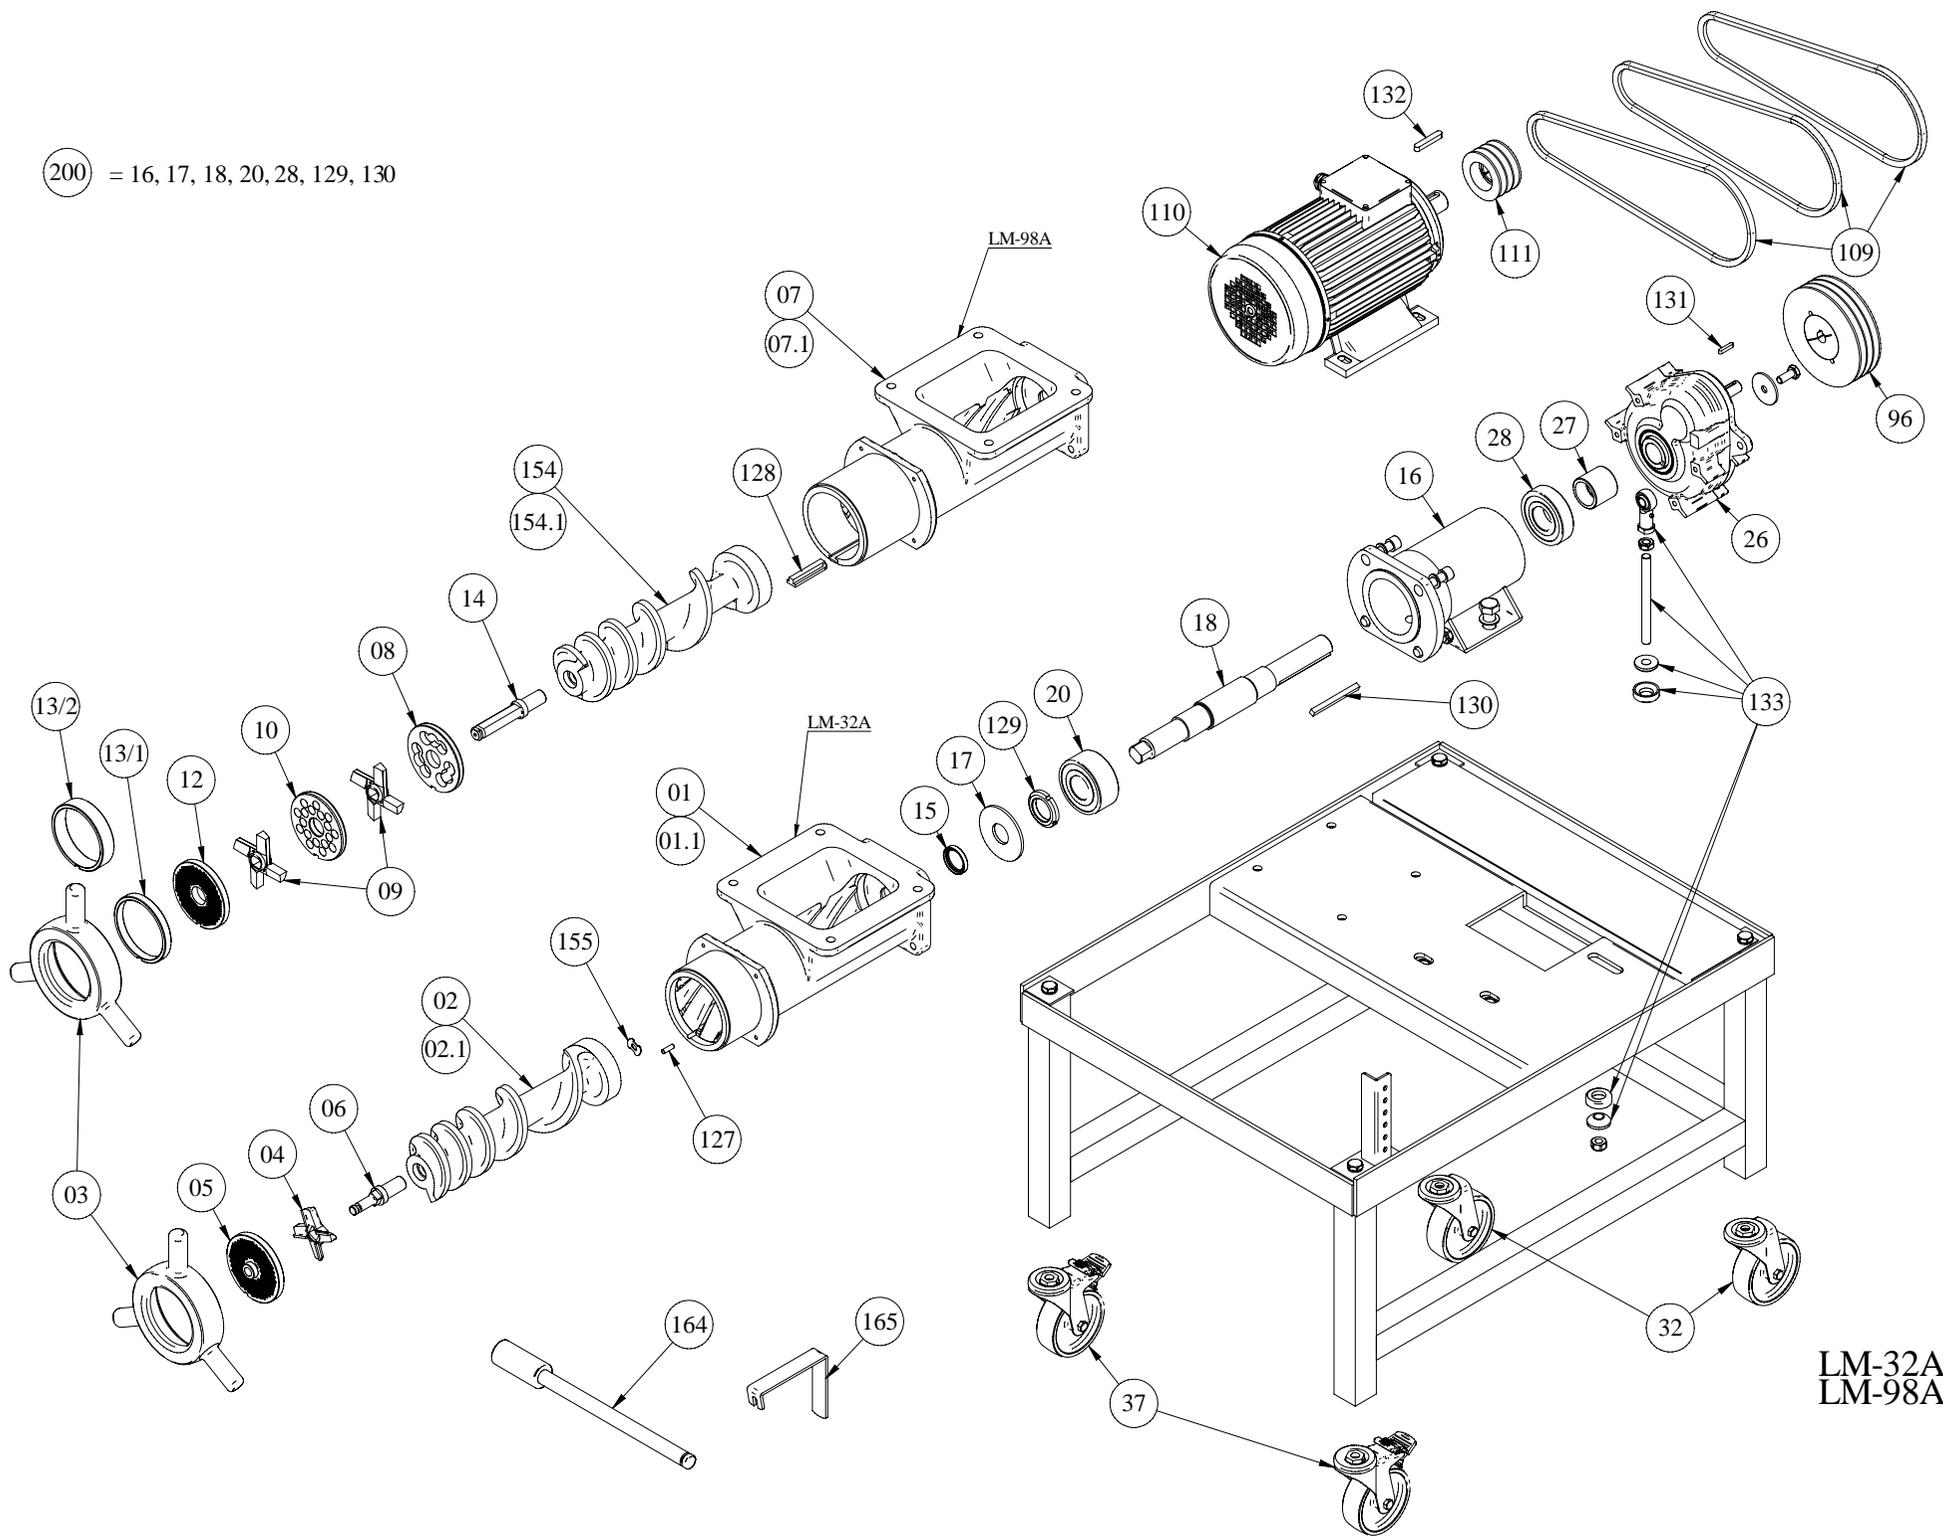

LM-32A
LM-98A

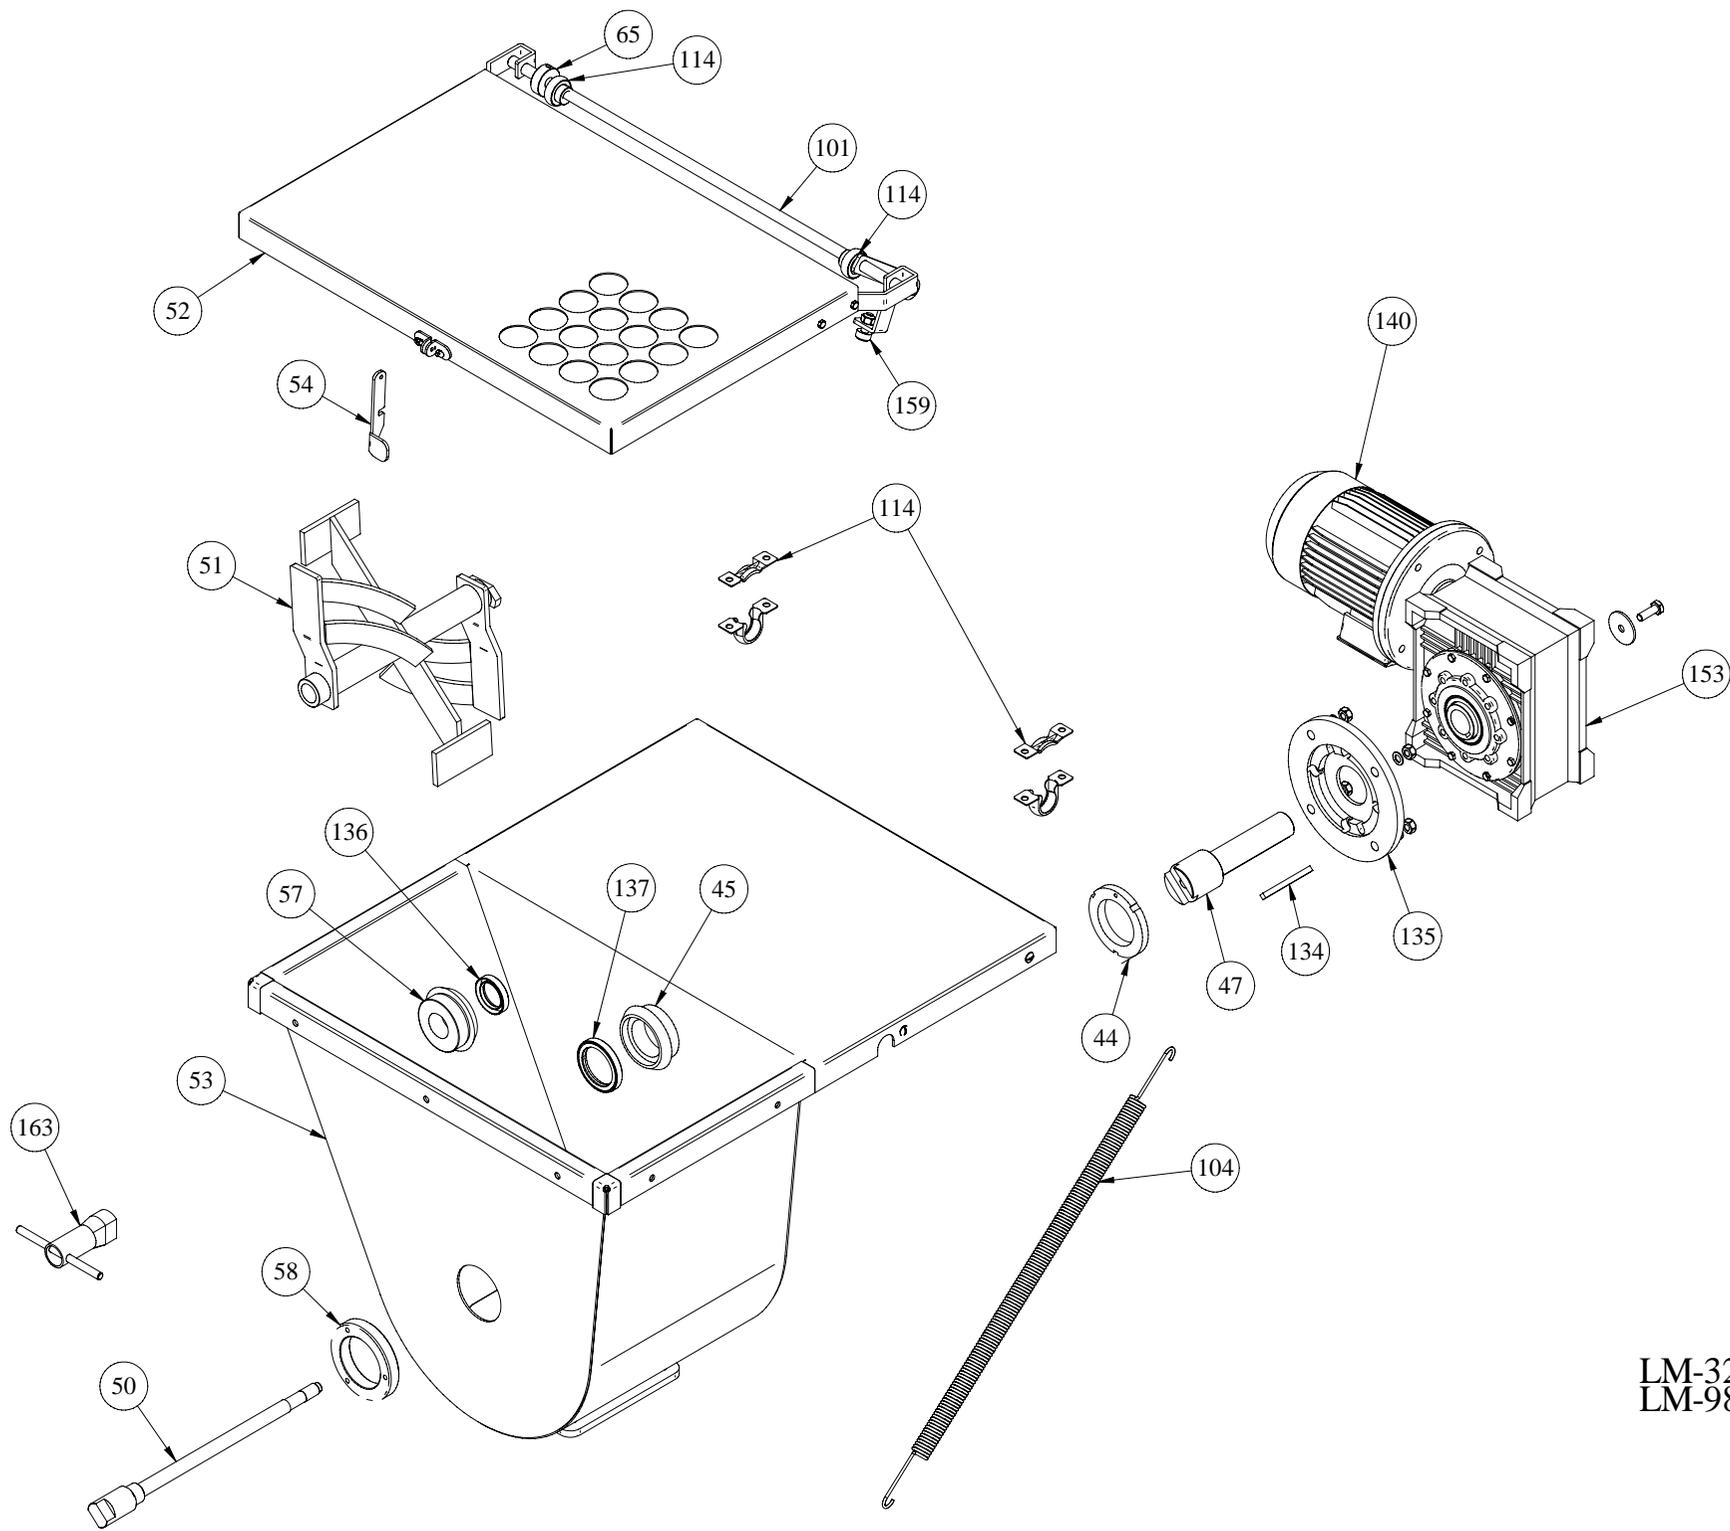

LM-32A
LM-98A

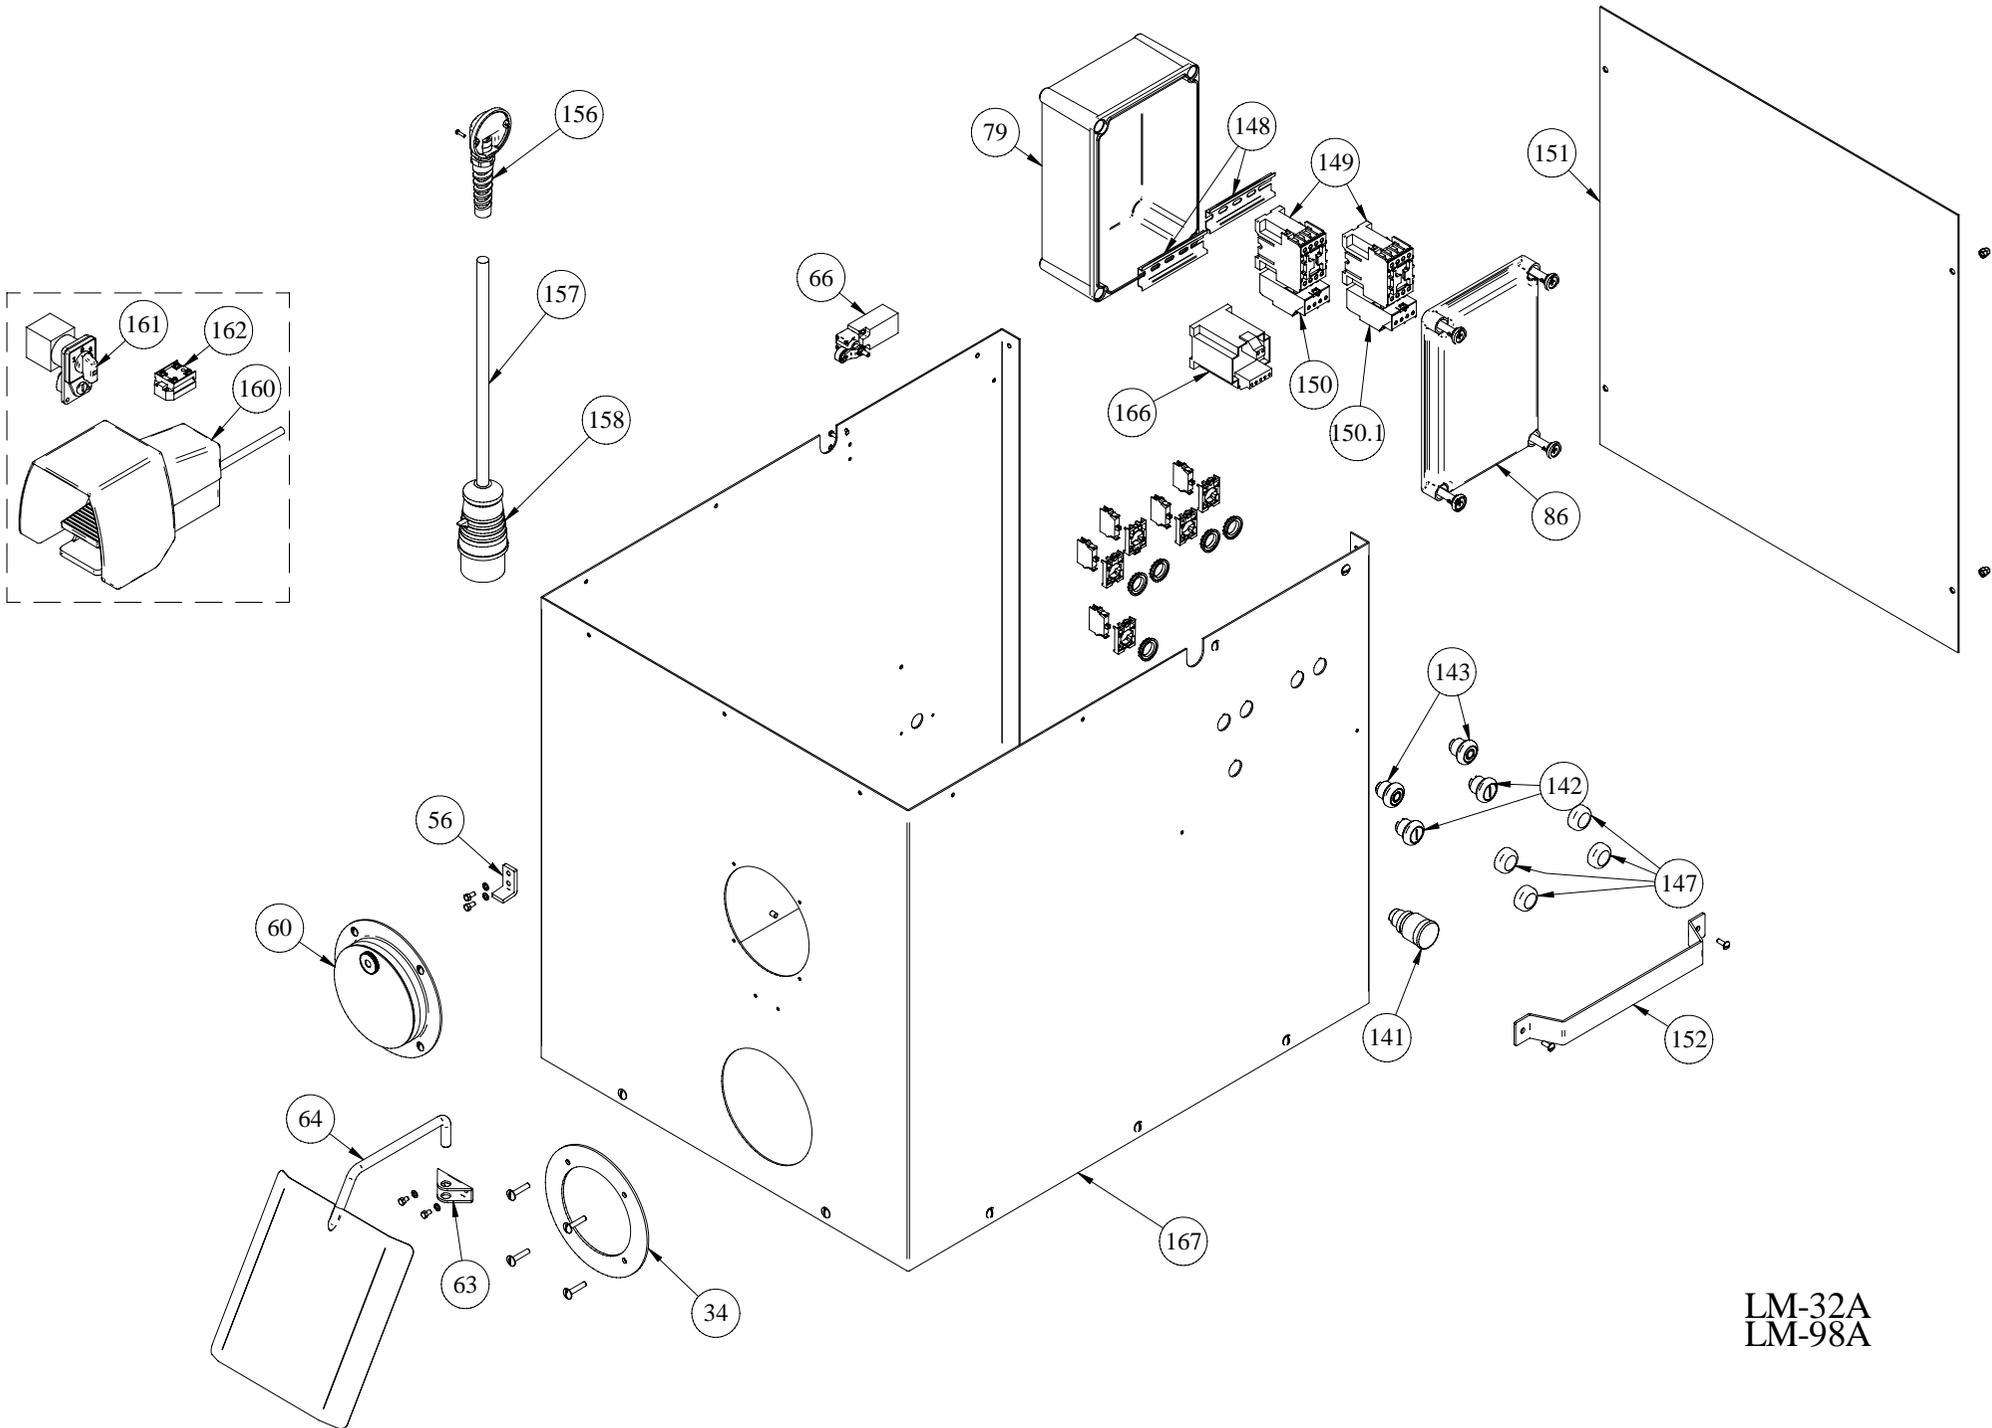

LM-32A
LM-98A