

Ryhmä: 511


LM-130A MEAT MINCER

Code	Item name
LM130A003	LM-130A ENTRY NUT
LM130A007	LM-130A GRINDING HOUSE CAST IRON
LM130A007,1	LM-130A GRINDING HOUSE STAINLESS
LM130A008	LM-130A PRECUTTER
LM130A009	LM-130A KNIFE
LM130A010	LM-130A HOLEPLATE
LM130A012	LM-130A HOLEPLATE
LM130A013/1	LM-130A DISTANCE RING 13mm
LM130A013/2	LM-130A DISTANCE RING 30mm
LM130A014	LM-130A STUD
LM130A015	LM-130A BEARING TRESTLE
LM130A016	LM-130A PROTECTIVE PLATE
LM130A017	LM-130A LOCK NUT KM 10
LM130A019	LM-130A BEARING 3210
LM130A024	LM-130A DRIVE SHAFT
LM130A026	LM-130A BEARING 6210 2RS
LM130A027	LM-130A BUSHING
LM130A030	LM-130A MOTOR 7,5 kW
LM130A035	LM-130A LID BOLT
LM130A036	LM-130A LID BOLT
LM130A038	LM-130A MIXER
LM130A039	LM-130A NYLON BEARING
LM130A040	LM-130A LOCK NUT
LM130A042	LM-130A SHAFT FOR MIXER
LM130A045	LM-130A COVER FOR MIXER SHAFT
LM130A046	LM-130A SPALSH COVER BRACKET
LM130A047	LM-130A SPALSH COVER
LM130A048	LM-130A FRONT PLATE
LM130A063	LM-130A CONNECTION BOX
LM130A069	LM-130A COVER FOR CONNECTION BOX
LM130A076	LM-130A HINGE SHAFT
LM130A079	LM-130A HINGE BEARING
LM130A080	LM-130A SPRING
LM130A082	LM-130A RUBBER
LM130A099	LM-130A LOCK NUT KM 15
LM130A100	LM-130A NYLON BEARING
LM130A102	LM-130A DRIVE SHAFT FOR MIXER
LM130A103	LM-130A PULLEY
LM130A104	LM-130A BELT XPZ-1060
LM130A105	LM-130A GEARBOX
LM130A107	LM-130A TURNBUCKLE
LM130A108	LM-130A PULLEY
LM130A113	LM-130A BACK COVER
LM130A126	LM-130A SAFETY SWITCH
LM130A137	LM-130A KEY
LM130A138	LM-130A GASKET AS 45x62x10
LM130A139	LM-130A KEY
LM130A140	LM-130A KEY
LM130A141	LM-130A KEY
LM130A143	LM-130A WHEEL WITH BRAKE
LM130A144	LM-130A WHEEL
LM130A145	LM-130A GASKET AS 35x52x10
LM130A146	LM-130A GASKET A 53x68x10
LM130A147	LM-130A FLANGE
LM130A148	LM-130A MOTOR FOR MIXER 1,1 kW
LM130A149	LM-130A KEY
LM130A150	LM-130A COVER
LM130A151	LM-130A EMERGENCY STOP BUTTON
LM130A152	LM-130A PROTECTIVE RUBBER
LM130A153	LM-130A START BUTTON
LM130A154	LM-130A STOP BUTTON

Ryhmä: 511


LM-130A MEAT MINCER

Code	Item name
LM130A158	LM-130A RAIL
LM130A159	LM-130A CONTACTOR DILM 17-10 24V
LM130A159,1	LM-130A CONTACTOR (MIXER) DILM 9-10
LM130A160	LM-130A THERMAL OVERLOAD RELAY ZB 32-24
LM130A160,1	LM-130A THERMAL OVERLOAD RELAY (MIXER) ZB 12-4
LM130A161	LM-130A FEED SCREW (INCL.PART 14)
LM130A163	LM-130A CABLE GLAND
LM130A164	LM-130A CABLE
LM130A165	LM-130A PLUG
LM130A166	LM-130A KEY SWITCH FOR FOOT SWITCH
LM130A167	LM-130A FOOT SWITCH
LM130A168	LM-130A MICROSWITCH FOR FOOT SWITCH SU 1
LM130A169	LM-130A GEARBOX FOR MIXER
LM130A170	LM-130A MIXING SHAFT KEY
LM130A171	LM-130A ENTRY NUT KEY
LM130A172	LM-130A KEY FOR FEEDSCREW
LM130A173	LM-130A TRANSFORMER
LM130A174	LM-130A CASING
LM130A200	LM-130A BEARING TRESTLE, COMPLETE INCL.PARTS 15-17,19,24,26,140)
LM130A201	LM-130A KEY OLD MODEL
LM130A203	LM-130A MOTOR 11 kW
LM130A204	LM-130A MOTOR FOR MIXER 1,5 kW
LM130A205	LM-130A BELT XPA 1120

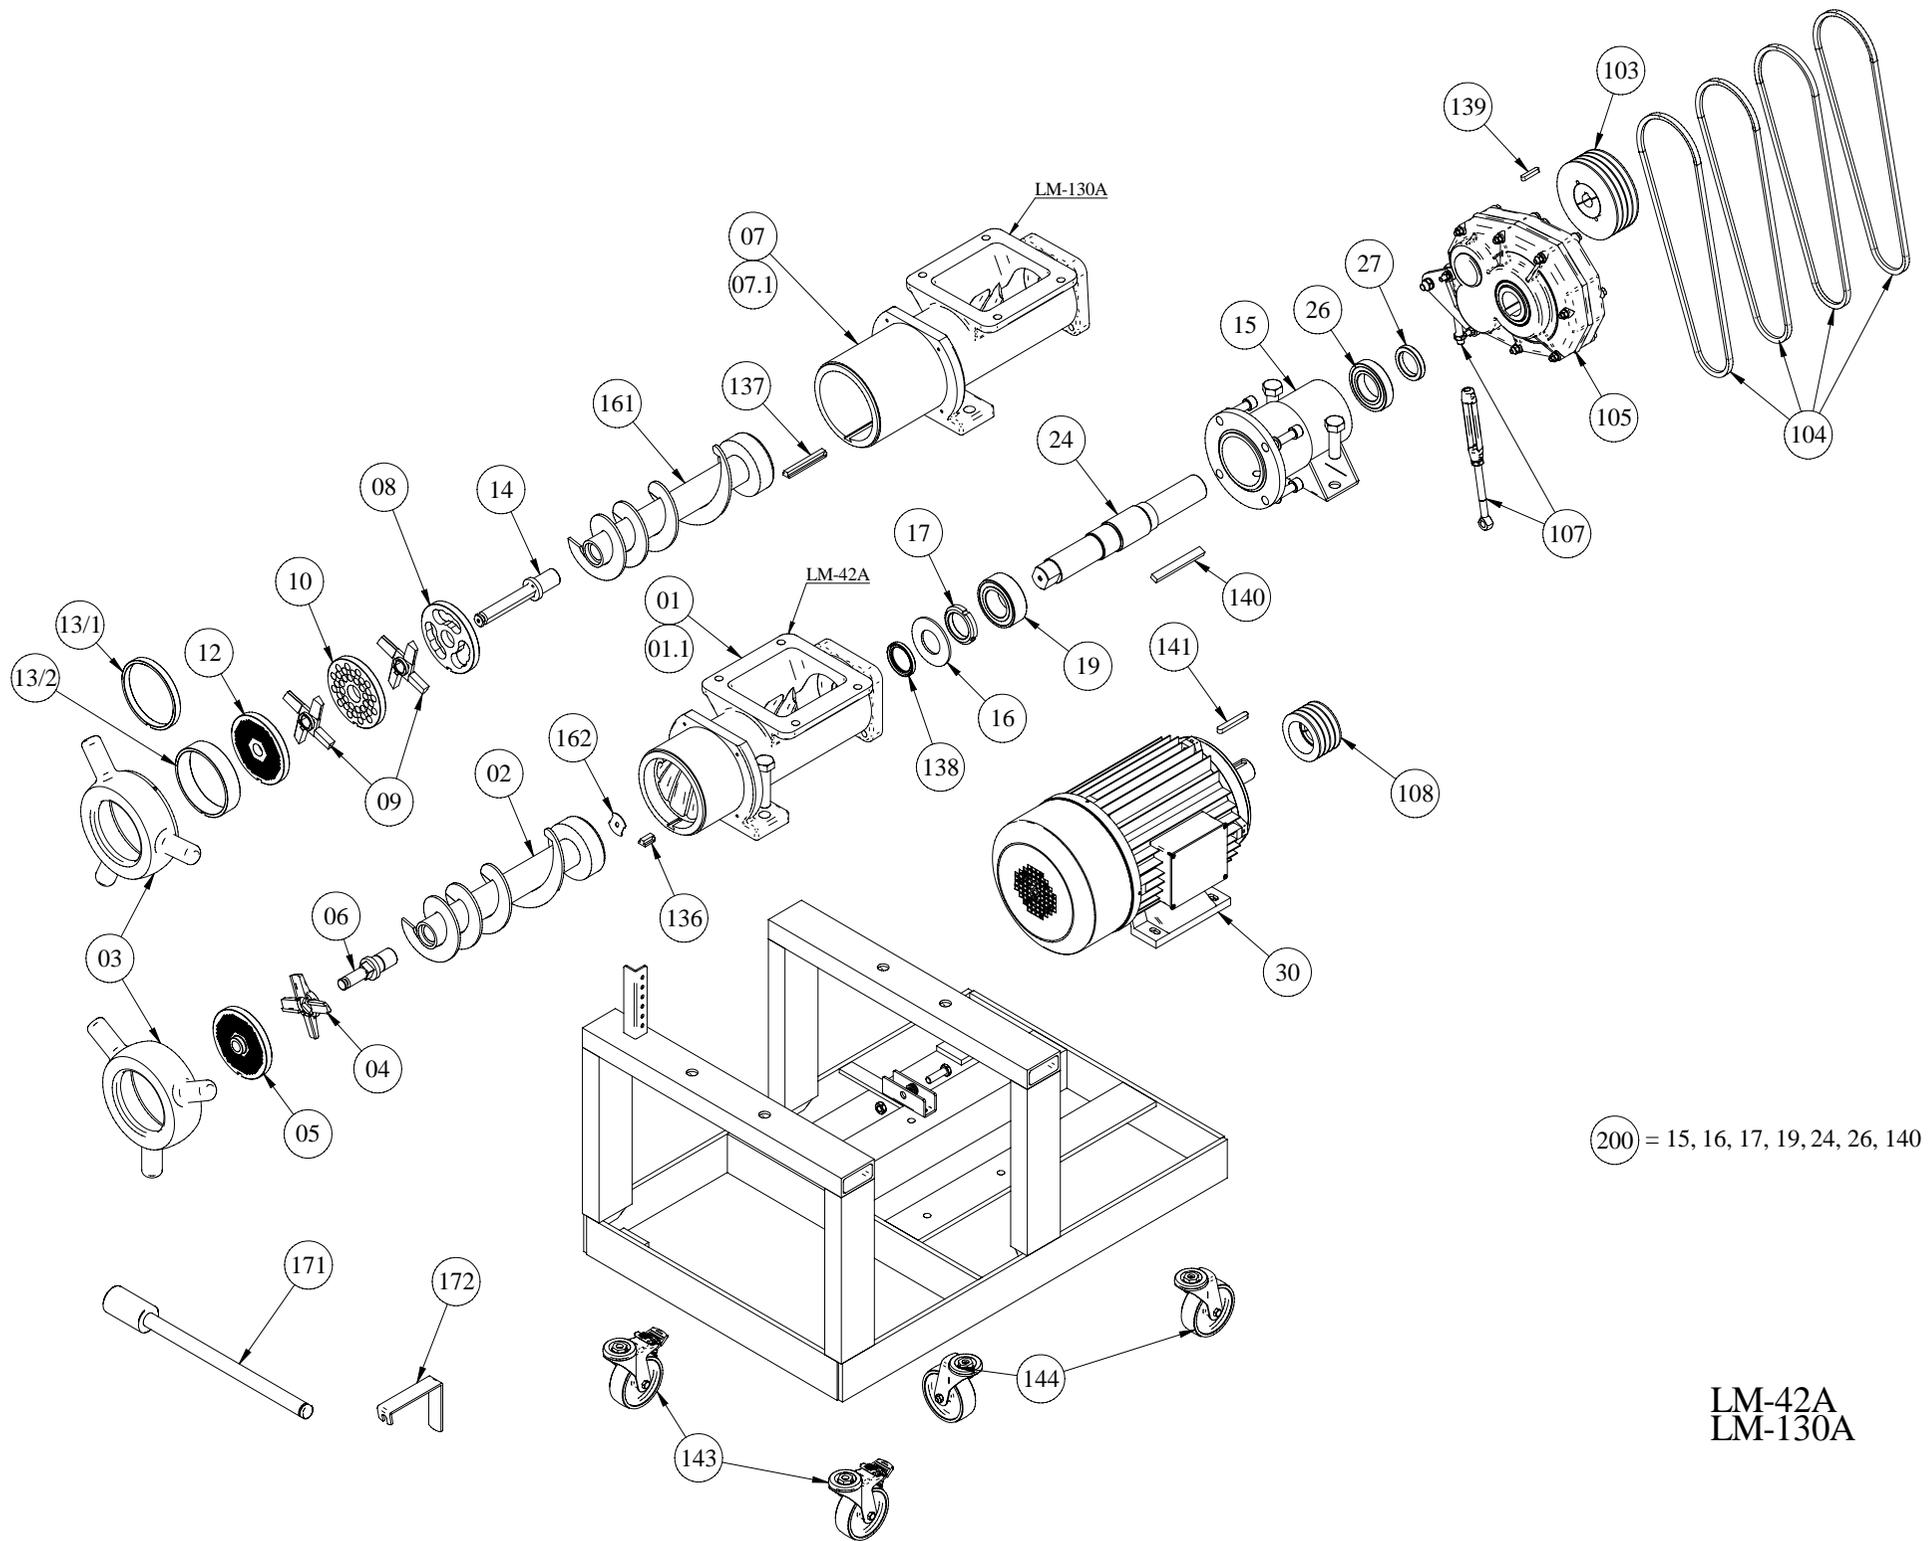

(200) = 15, 16, 17, 19, 24, 26, 140

LM-42A
LM-130A

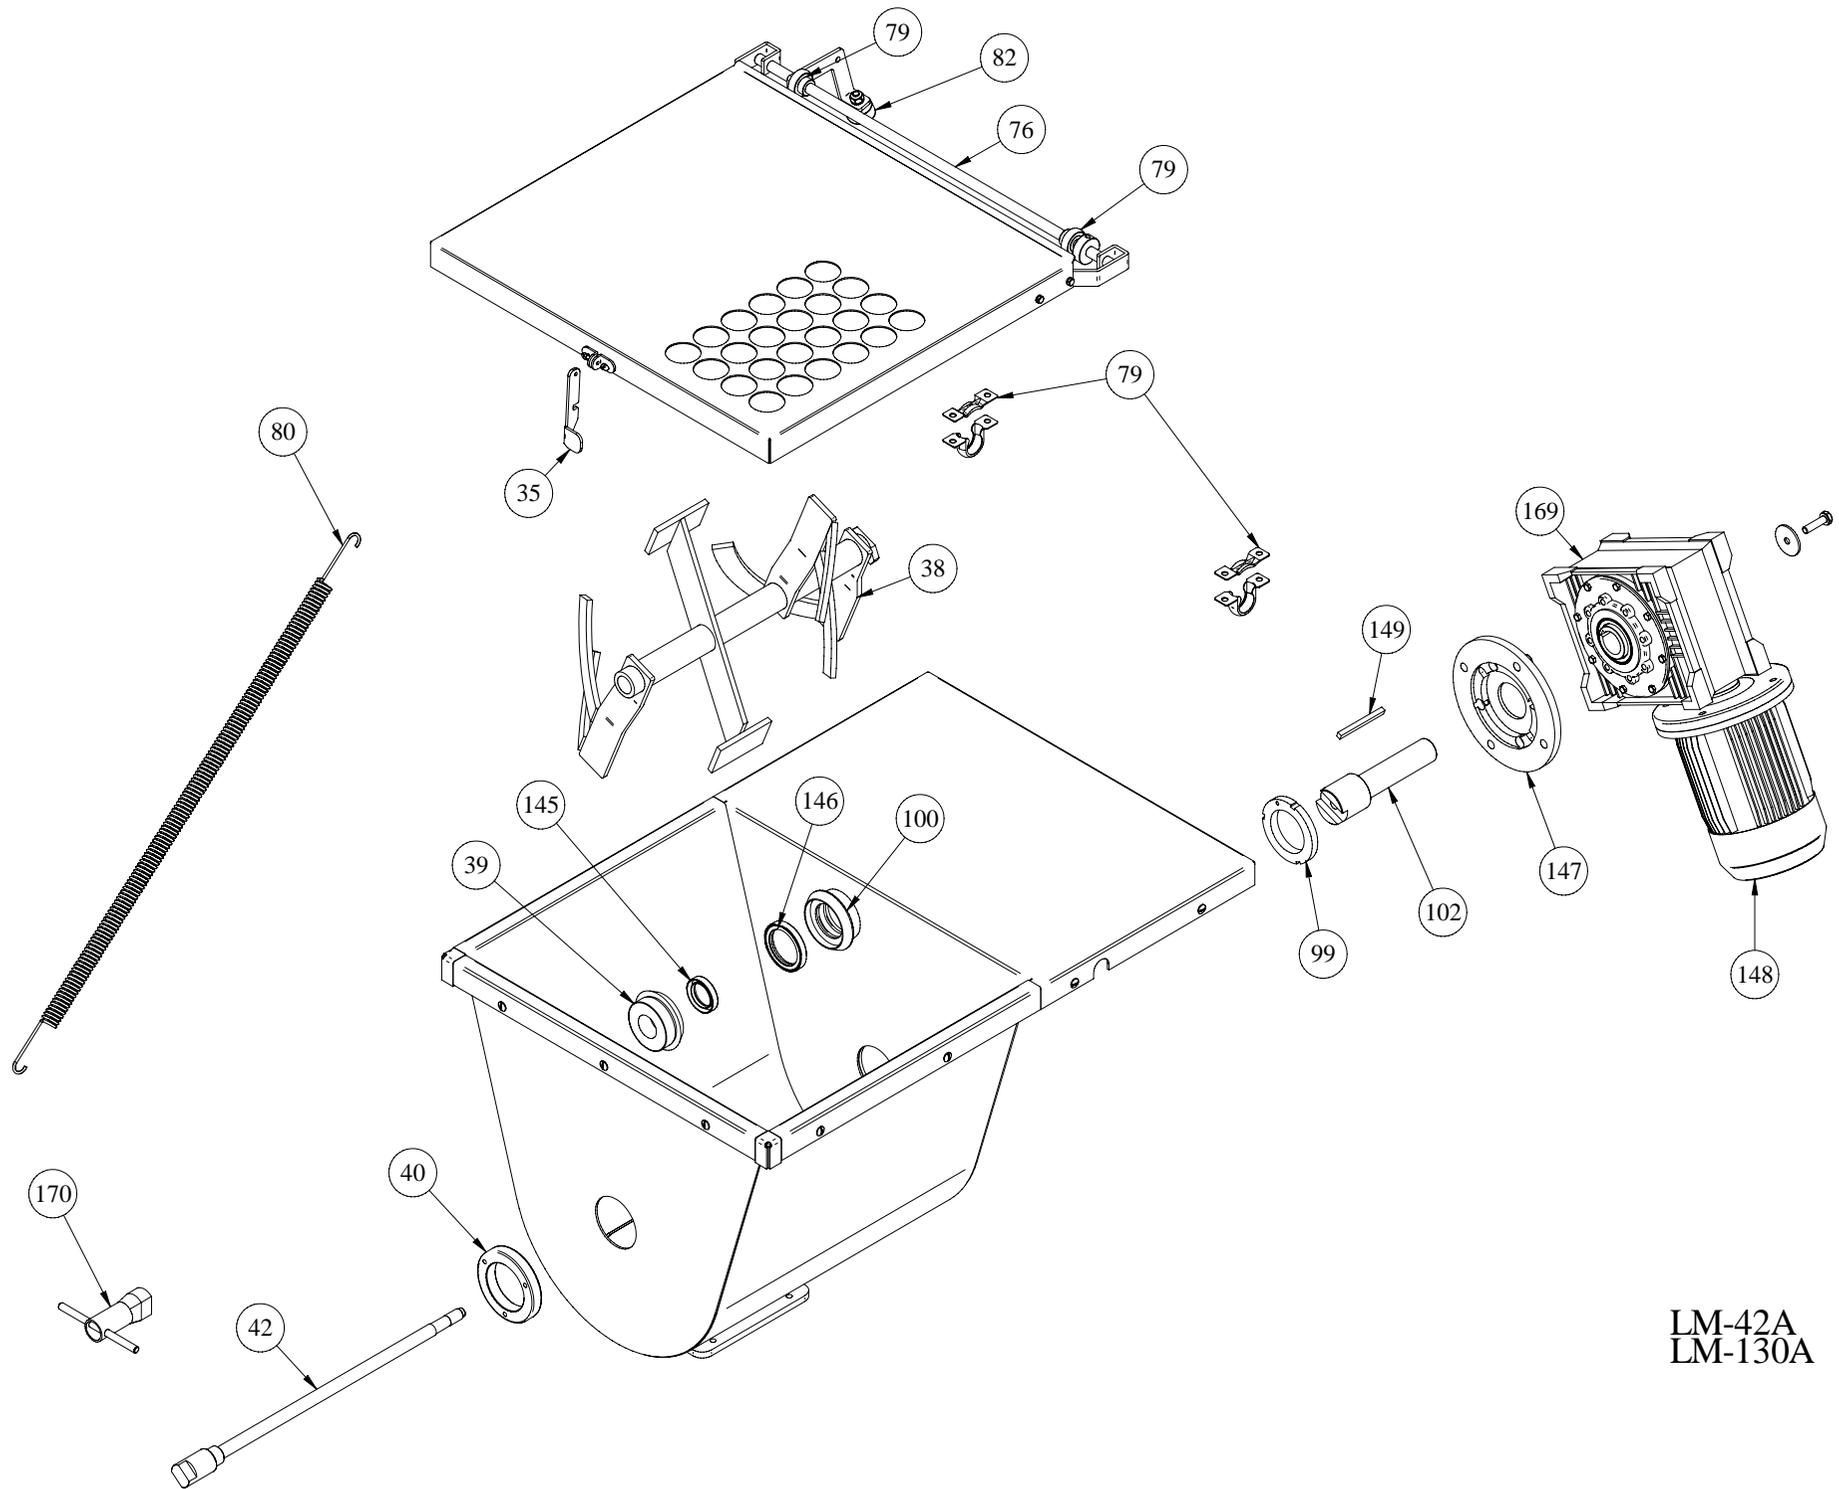

LM-42A
LM-130A

