

Ryhmä: 541

LM-98A MEAT MINCER


Code	Item name
LM98A003	LM-98A ENTRY NUT
LM98A007	LM-98A GRINDING HOUSE CAST IRON
LM98A007,1	LM-98A GRINDING HOUSE STAINLESS
LM98A008	LM-98A PRECUTTER
LM98A009	LM-98A KNIFE
LM98A010	LM-98A HOLEPLATE
LM98A012	LM-98A HOLEPLATE
LM98A013/1	LM-98A DISTANCE RING 12MM
LM98A013/2	LM-98A DISTANCE RING 22MM
LM98A014	LM-98A STUD
LM98A015	LM-98A GASKET AS 30x40x7
LM98A016	LM-98A BEARING TRESTLE
LM98A017	LM-98A PROTECTIVE PLATE
LM98A018	LM-98A DRIVE SHAFT
LM98A020	LM-98A BEARING 3307
LM98A026	LM-98A GEARBOX
LM98A027	LM-98A BUSHING
LM98A028	LM-98A BEARING 6307 2RS
LM98A032	LM-98A WHEEL
LM98A034	LM-98A FRONT PLATE
LM98A037	LM-98A WHEEL WITH BRAKE
LM98A044	LM-98A LOCK NUT KM 15
LM98A045	LM-98A NYLON BEARING
LM98A047	LM-98A DRIVE SHAFT FOR MIXER
LM98A050	LM-98A SHAFT FOR MIXER
LM98A051	LM-98A MIXER
LM98A052	LM-98A LID
LM98A053	LM-98A MEAT TRAY
LM98A054	LM-98A LID BOLT
LM98A056	LM-98A LID BOLT
LM98A057	LM-98A NYLON BEARING
LM98A058	LM-98A LOCK NUT
LM98A060	LM-98A COVER FOR MIXER SHAFT
LM98A063	LM-98A SPLASH COVER BRACKET
LM98A064	LM-98A SPLASH COVER
LM98A065	LM-98A PUSHER FOR SAFETY SWITCH
LM98A066	LM-98A SAFETY SWITCH
LM98A079	LM-98A CONNECTION BOX
LM98A086	LM-98A COVER FOR CONNECTION BOX
LM98A096	LM-98A PULLEY
LM98A101	LM-98A HINGE SHAFT
LM98A104	LM-98A SPRING
LM98A109	LM-98A BELT XZP-950
LM98A110	LM-98A MOTOR 3kW
LM98A111	LM-98A PULLEY
LM98A114	LM-98A HINGE BEARING
LM98A128	LM-98A KEY
LM98A129	LM-98A LOCK NUT KM 7
LM98A130	LM-98A KEY
LM98A131	LM-98A KEY
LM98A132	LM-98A KEY
LM98A133	LM-98A TURNBUCKLE
LM98A134	LM-98A KEY
LM98A135	LM-98A FLANE
LM98A136	LM-98A GASKET AS 35x52x10
LM98A137	LM-98A GASKET A 53x68x10
LM98A140	LM-98A MOTOR FOR MIXER 1,1kW
LM98A141	LM-98A EMERGENCY STOP BUTTON
LM98A142	LM-98A START BUTTON
LM98A143	LM-98A STOP BUTTON
LM98A147	LM-98A PROTECTIVE RUBBER

Ryhmä: 541


LM-98A MEAT MINCER

Code	Item name
LM98A148	LM-98A RAIL
LM98A149	LM-98A CONTACTOR DILM 9-10 24V
LM98A150	LM-98A THERMAL OVERLOAD RELAY ZB
LM98A150,1	LM-98A THERMAL OVERLOAD RELAY
LM98A151	LM-98A BACK COVER
LM98A152	LM-98A COVER
LM98A153	LM-98A GEARBOX FOR MIXER
LM98A154	LM-98A FEED SCREW INCL.PART 14 ALUM
LM98A154,1	LM-98A FEED SCREW INCL.PART 14 STAIN
LM98A156	LM-98A CABLE GLAND
LM98A157	LM-98A CABLE
LM98A158	LM-98A PLUG
LM98A159	LM-98A RUBBER
LM98A160	LM-98A FOOT SWITCH
LM98A161	LM-98A KEY SWITCH FOR FOOT SWITCH
LM98A162	LM-98A MICROSWITCH FOOT SWITCH SU
LM98A163	LM-98A MIXING SHAFT KEY
LM98A164	LM-98A ENTRY NUT KEY
LM98A165	LM-98A KEY FOR FEED SCREW
LM98A166	LM-98A TRANSFORMER
LM98A167	LM-98A CASING
LM98A200	LM-98A BEARING TRESTLE COMPL. 16-18,
LM98A201	LM-98A KEY OLD MODEL


200 = 16, 17, 18, 20, 28, 129, 130

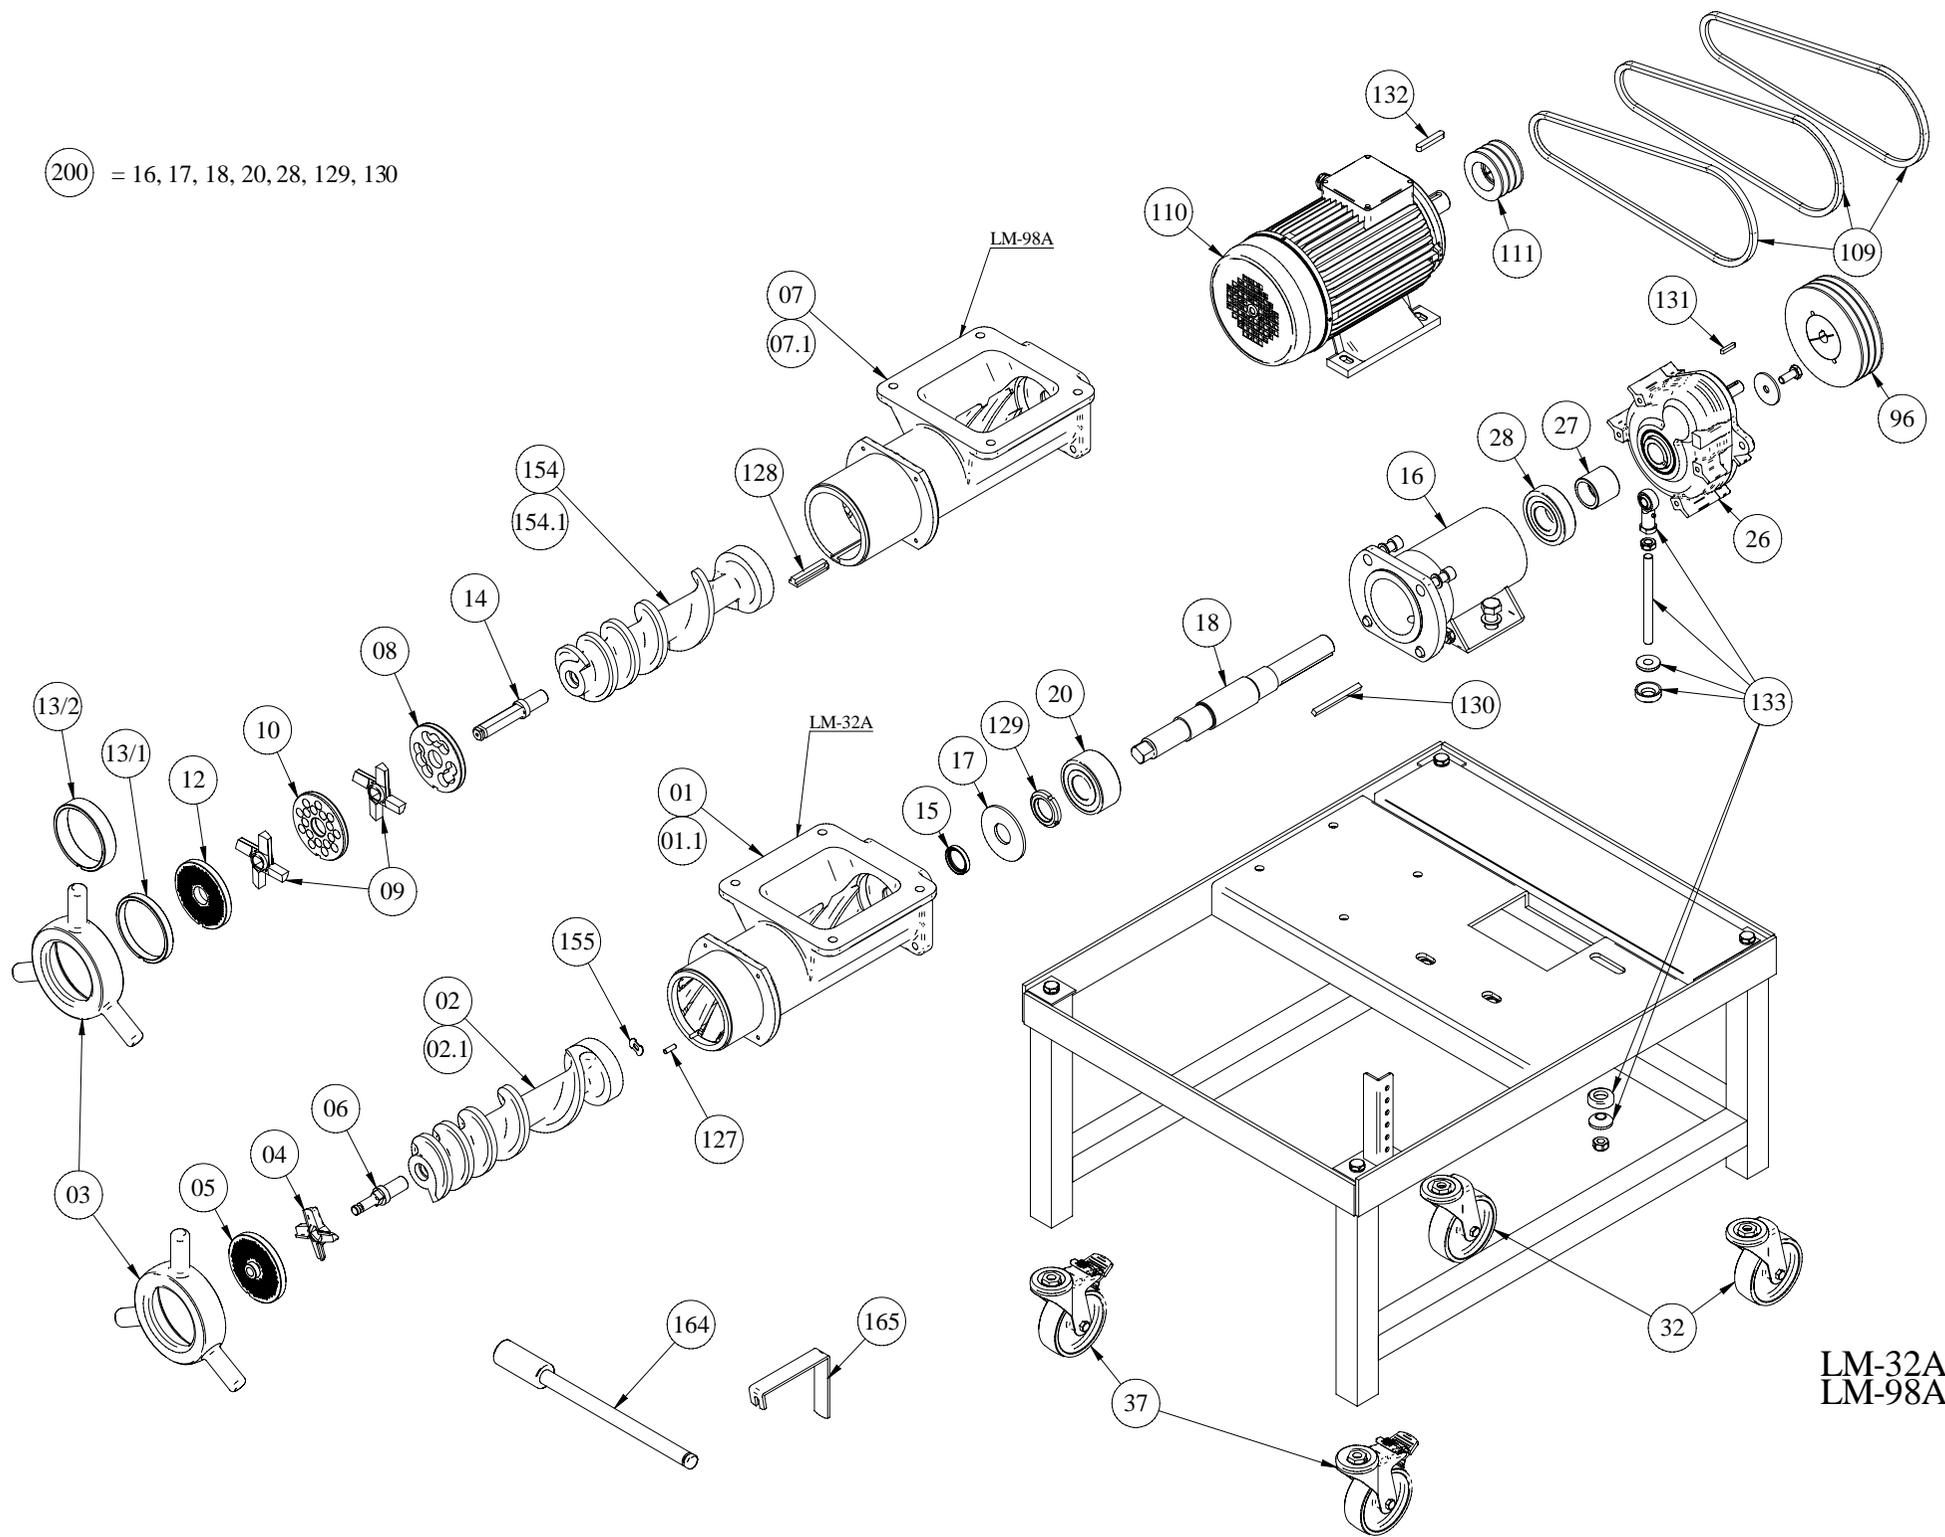

LM-32A
LM-98A

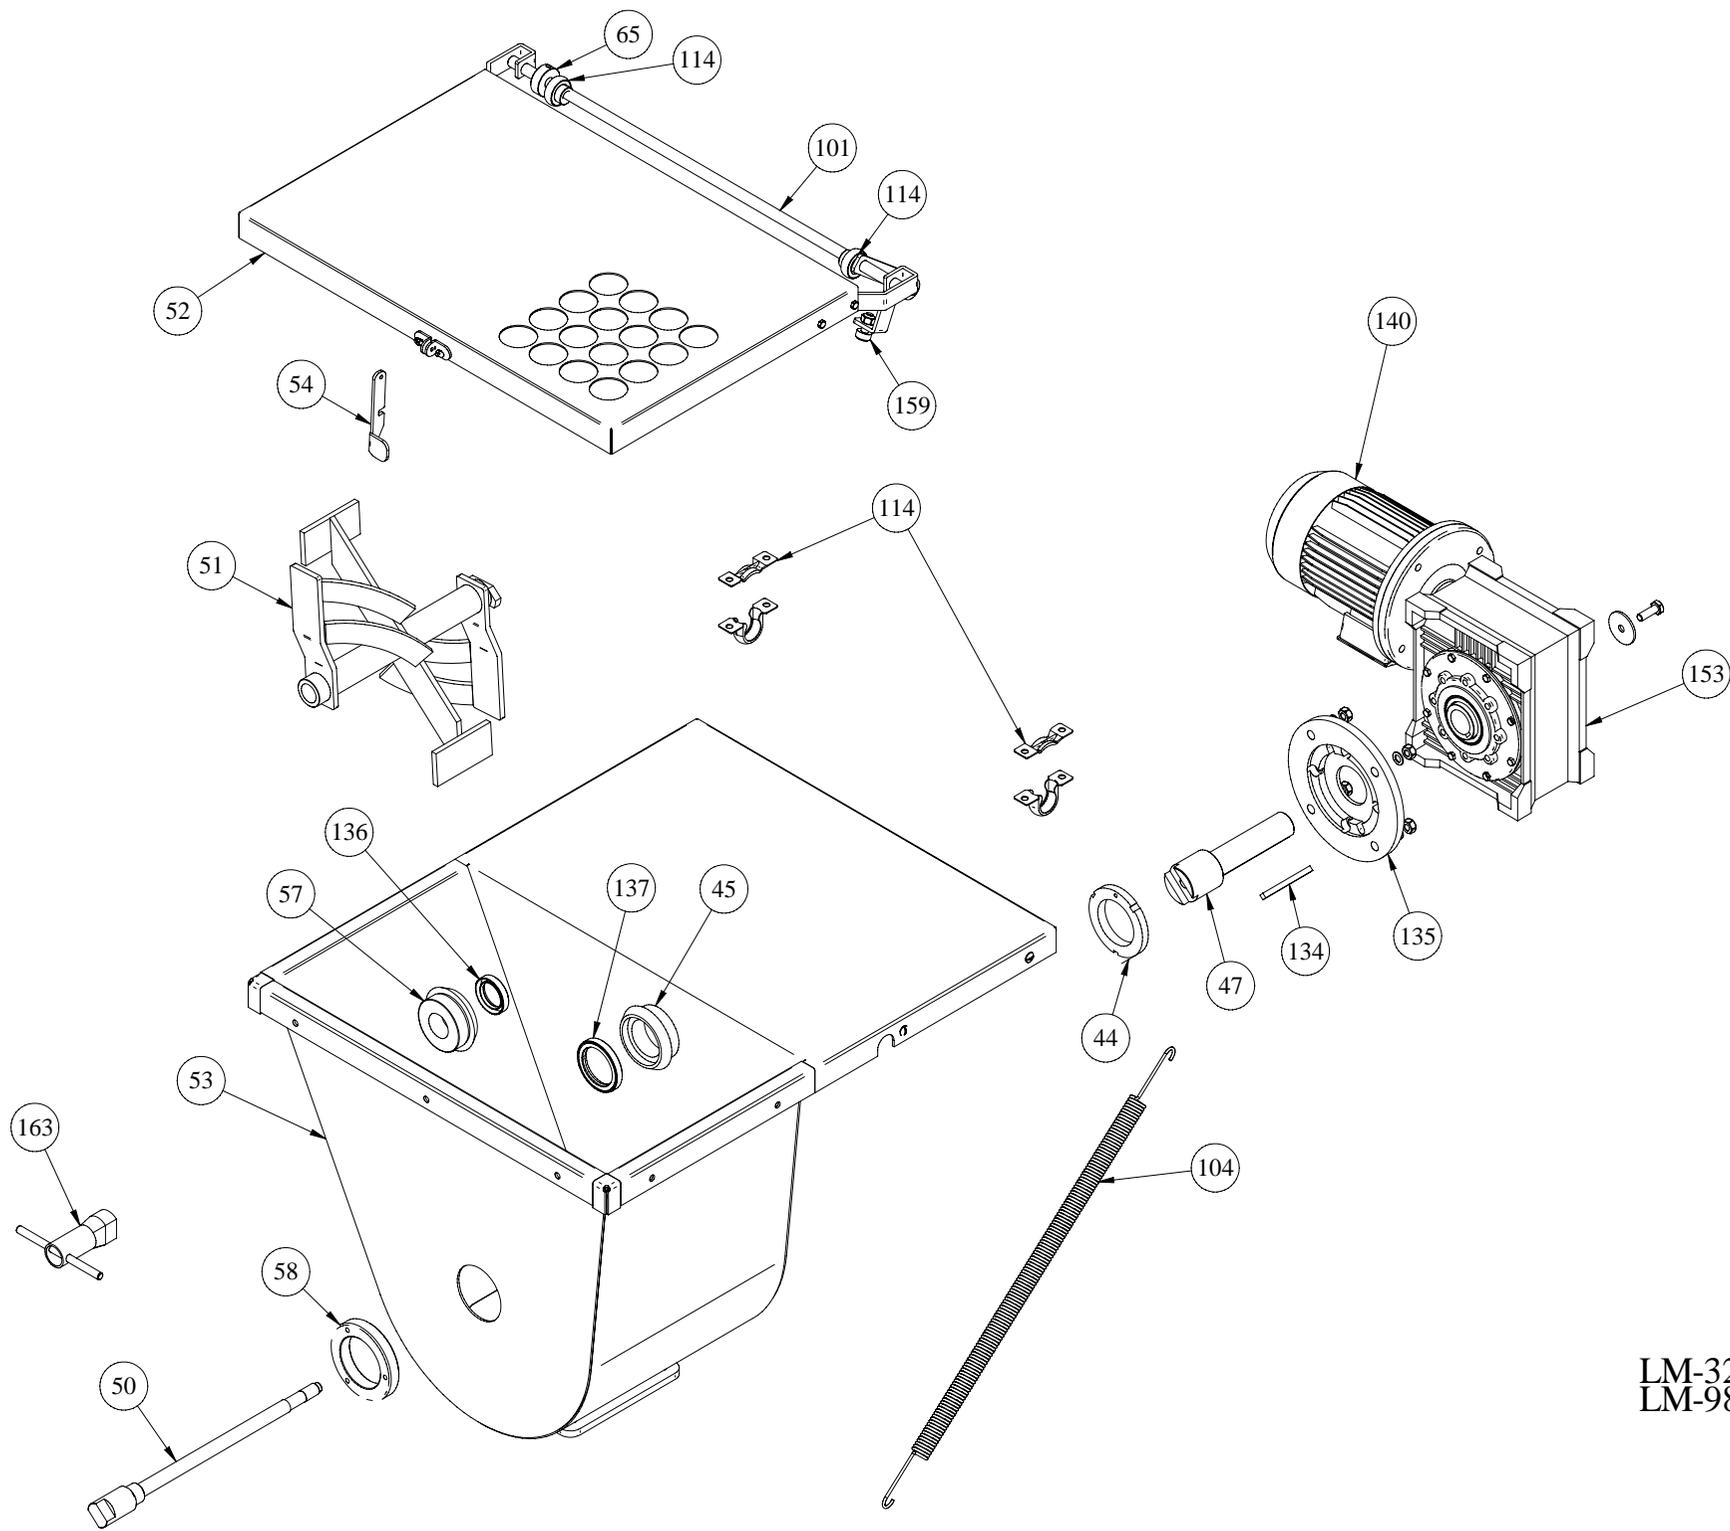

LM-32A
LM-98A

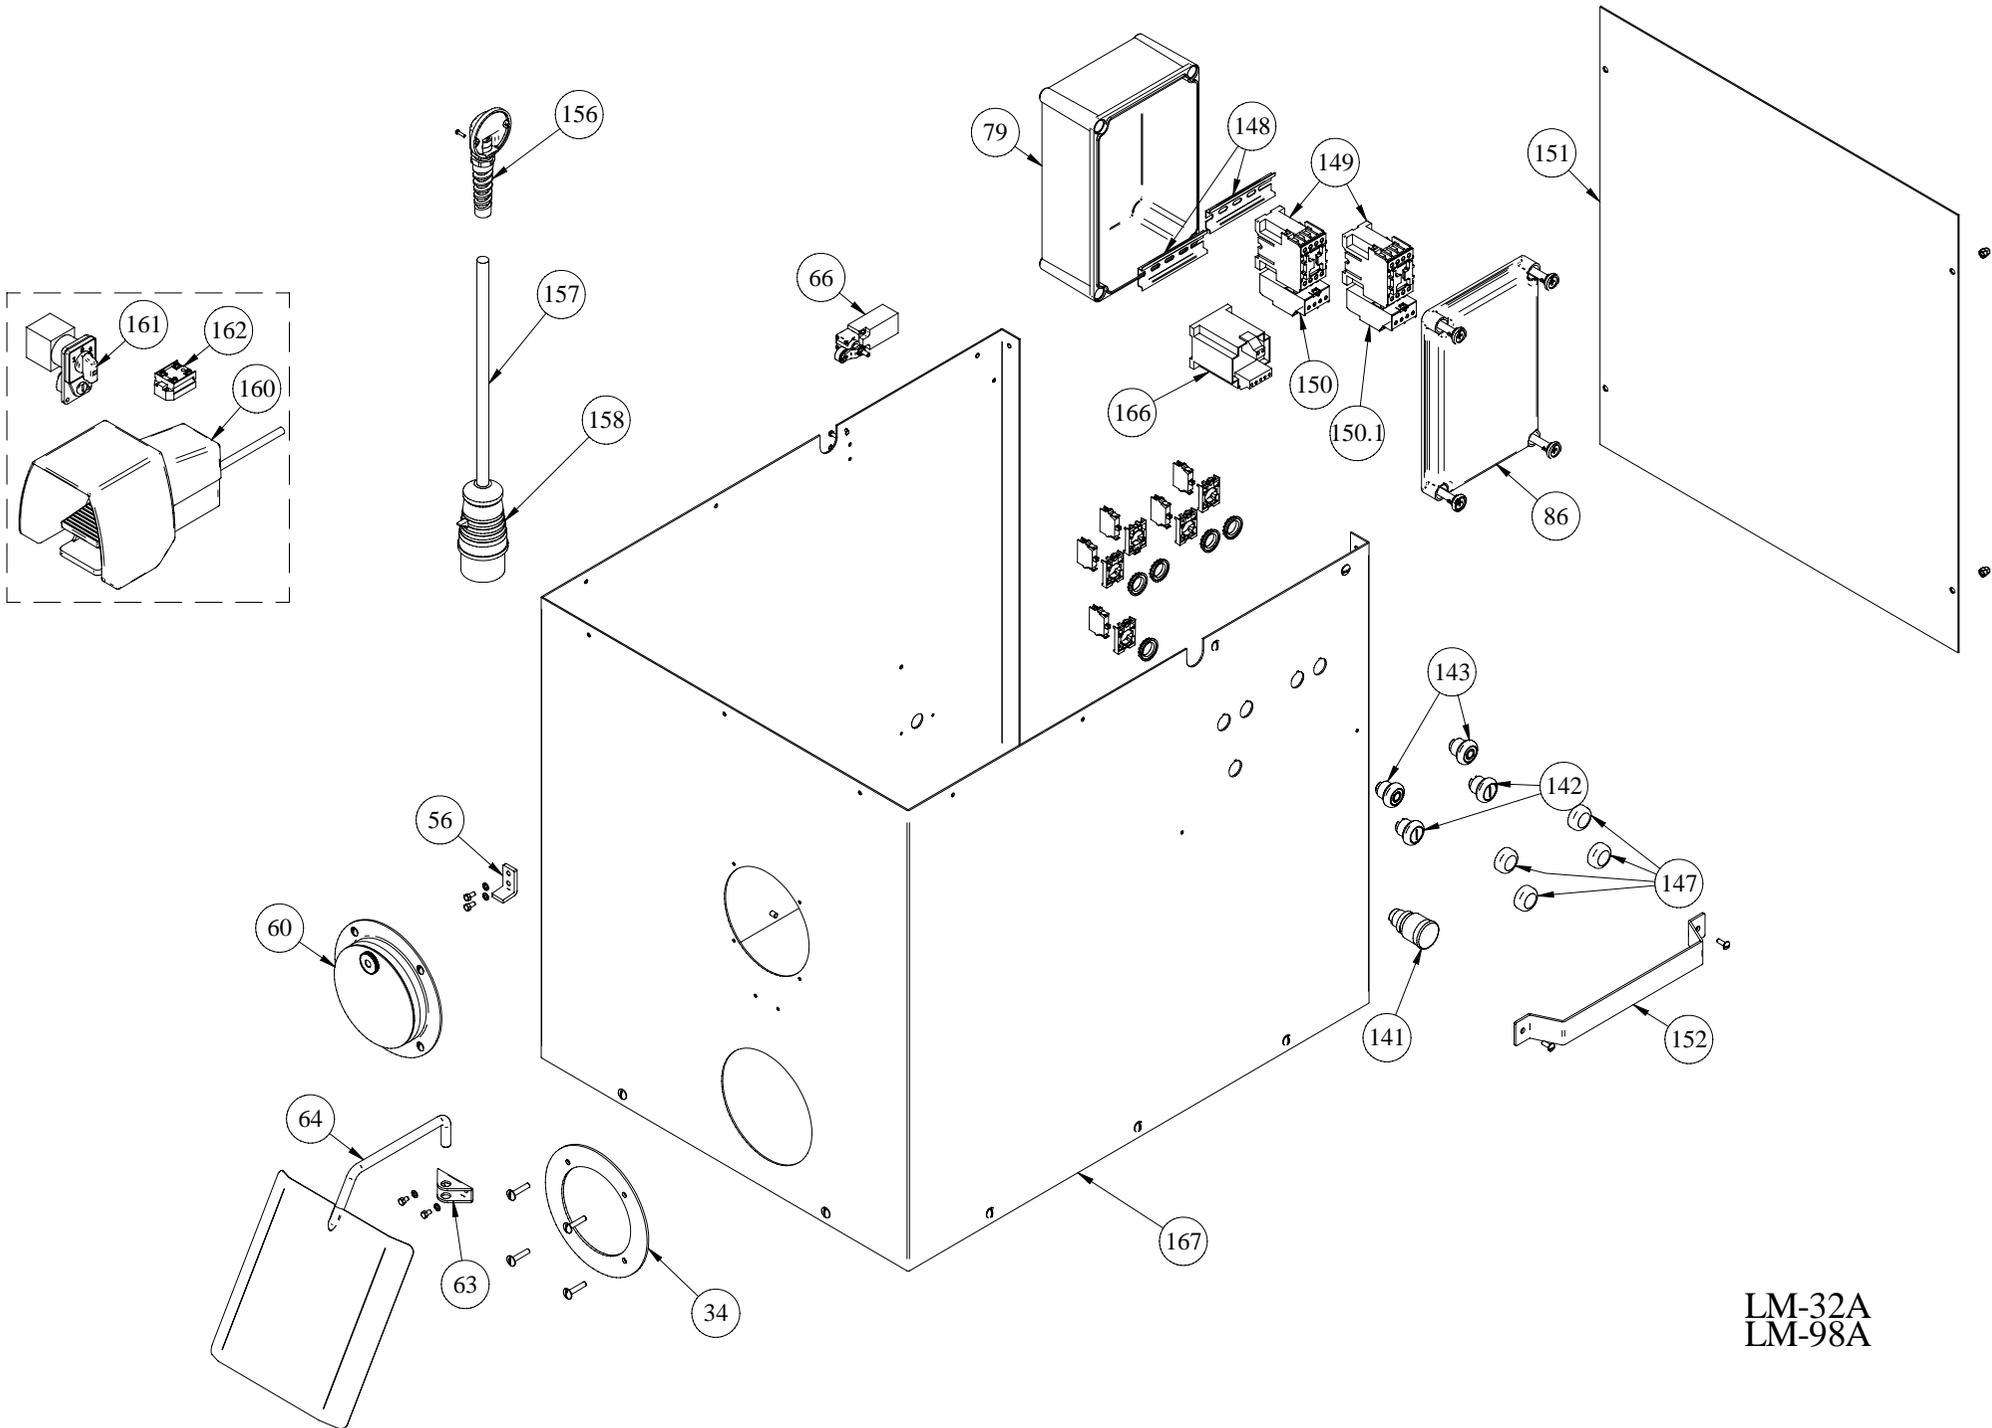

LM-32A
LM-98A