

SPARE PARTS SPECIFICATION

FIN-BAKE SMART

Valid for all convection ovens with marked under following syntax of product code
- AAA-DDD - Codes of serial product
- AAA-DDD-NNNNNNN - Codes of product with option

Product type:

FB5-S 100-601	FB8-S 100-602	FB10-S 100-603
FB5-S L 100-601.L00000	FB8-S L 100-602.L00000	FB10-S L 100-603.L00000
FB5-S CL 100-601.000010	FB8-S CL 100-602.000010	FB10-S CL 100-603.000010
FB5-S L CL 100-601.L00010	FB8-S L CL 100-602.L00010	FB10-S L CL 100-603.L00010

Valid from LOT number:

220464


Valid from DATE:

16.06.22


Position on the drawing	Spare part recommended	Code - Spare part name	Unit	Product type													
				FB5-S	FB5-S L	FB5-S CL	FB5-S L CL	FB8-S	FB8-S L	FB8-S CL	FB8-S L CL	FB10-S	FB10-S L	FB10-S CL	FB10-S L CL		
001	●	001-10016 - Heater F-280.5, 15000W, 3x230V, (Fi 8,5 / M14)	PC					●	●	●	●						
002	●	001-10017 - Heater F-280.7, 11000W, 4,0+4,0+3,0kW	PC	●	●	●	●										
003	●	001-10033 - Heater CG8,382"30L" _230V/9,55kW	PC														
004		002-10008 - Safety thermostat 315 C	PC	●	●	●	●	●	●	●	●	●	●	●	●		
005	●	003-06060 - Door gasket OC-B-05	PC	●	●	●	●										
006	●	003-06111 - Door gasket OC-B-08	PC					●	●	●	●						
007		003-07036 - Gasket for chimney 100x88	PC	●	●	●	●	●	●	●	●	●	●	●	●		
008	●	003-10009 - Washer drain viton fi46xfi6	PC			●	●			●	●			●	●		
009	●	003-10010 - Door gasket OC-B-10	PC									●	●	●	●		
010	●	003-10012 - Axis sealing HTB, Fi-17x24/30x4,14 D77	PC	●	●	●	●	●	●	●	●	●	●	●	●		
011		003-10016 - Sealing o-ring fi50x6	PC	●	●	●	●	●	●	●	●	●	●	●	●		
013	●	003-10020 - Thermal fuse sealing OC fi10xfi14	PC	●	●	●	●	●	●	●	●	●	●	●	●		
014	●	003-10021 - Probe sealing OC fi8xfi14	PC	●	●	●	●	●	●	●	●	●	●	●	●		
015	●	003-10022 - Sealing fi5xfi10	PC	●	●	●	●	●	●	●	●	●	●	●	●		
016	●	003-10023 - Sealing o-ring fi15x3 OC-B	PC	●	●	●	●	●	●	●	●	●	●	●	●		
017	●	004-10012 - Controller MOTOR INVERTER Vector 0,8kW, 230V	PC	●	●	●	●	●	●	●	●	●	●	●	●		
018		004-10036 - Controller - MAIN board BASIC-UL	PC	●	●	●	●	●	●	●	●	●	●	●	●		
019		005-10015 - Motor drive - flap 35s	PC	●	●	●	●	●	●	●	●	●	●	●	●		
020	●	005-10016 - Motor drive - drain ball valve 1 1/4"	PC			●	●			●	●			●	●		
021	●	005-10022 - Fan DP200A2123XBTGN,120x120x38_230V	PC	●	●	●	●	●	●	●	●	●	●	●	●		
022	●	005-10023 - Motor L7_EB60	PC	●	●	●	●	●	●	●	●	●	●	●	●		
023	●	006-10008 - Fan 1.0 VRTK350-082-06	PC	●	●	●	●	●	●	●	●	●	●	●	●		
024	●	007-00002 - Contactor CL03 12kW	PC									●	●	●	●		
025	●	007-10023 - Switch - relay DRM 270730LT	PC			●	●			●	●			●	●		
026	●	007-10024 - Switch - relay-base SCM_2CO_ECO	PC			●	●			●	●			●	●		
027	●	007-10026 - Contactor CL00A310TN 4kW	PC	●	●	●	●										
028	●	007-10027 - Contactor CL02A310TN 7,5kW	PC					●	●	●	●						
029	●	009-10010 - Transformer, power supply MW HDR-15-15	PC	●	●	●	●	●	●	●	●	●	●	●	●		
030	●	010-10006 - Temp.probe PT100 -125 (260 C), L=1,7 m	PC	●	●	●	●	●	●	●	●	●	●	●	●		
031	●	011-06020 - Electromagnetic valve 90	PC	●	●			●	●			●	●				
032	●	011-10005 - Electromagnetic valve - double angular 3/4"	PC			●	●			●	●			●	●		
033	●	011-10006 - Water level sensor (2 levels)	PC			●	●			●	●			●	●		
034	●	011-10007 - Cleaning pump 0,28kW; 2800/min; 230V	PC			●	●			●	●			●	●		
035		012-05092 - DIN Rail Terminal VS 4 PA - white	PC	●	●	●	●	●	●	●	●	●	●	●	●		
036		012-06130 - DIN Rail Terminal VS 4 PA - blue	PC	●	●	●	●	●	●	●	●	●	●	●	●		
037		012-06131 - DIN Rail Terminal VS 4 PE - ground	PC	●	●	●	●	●	●	●	●	●	●	●	●		
038		012-06132 - DIN Rail Terminal VSV 4 PA - fuse carrier	PC	●	●	●	●	●	●	●	●	●	●	●	●		
039		012-06134 - DIN Rail Terminal PKPA	PC	●	●	●	●	●	●	●	●	●	●	●	●		
040		012-06135 - DIN Rail Terminal VS 6 PA - white	PC	●	●	●	●	●	●	●	●	●	●	●	●		
041		012-06136 - DIN Rail Terminal VS 6 PA - blue	PC	●	●	●	●	●	●	●	●	●	●	●	●		
042		012-06137 - DIN Rail Terminal VS 6 PE - ground	PC	●	●	●	●	●	●	●	●	●	●	●	●		
043		012-10009 - Bushing terminal 4440 DC 68-2M/M black	PC	●	●	●	●	●	●	●	●	●	●	●	●		
044	●	015-10010 - Light LED OC-B-05	PC	●	●	●	●										
045	●	015-10014 - Light LED OC-B-08	PC					●	●	●	●	●	●	●	●		
046	●	016-05044 - Door switch, MS 362A-01	PC	●	●	●	●	●	●	●	●	●	●	●	●		
047		017-10012 - USB Cable female/male	PC	●	●	●	●	●	●	●	●	●	●	●	●		

Position on the drawing	Spare part recommended	Code - Spare part name	Unit	FB5-S	FB5-S L	FB5-S CL	FB5-S L CL	FB8-S	FB8-S L	FB8-S CL	FB8-S L CL	FB10-S	FB10-S L	FB10-S CL	FB10-S L CL
048		019-10007 - USB cover	PC	•	•	•	•	•	•	•	•	•	•	•	•
049		022-20009 - Rubber 90 curve Fi 20 150x150	PC			•	•			•	•			•	•
050		022-20010 - Rubber 90 curve Fi 28 150x150	PC			•	•			•	•			•	•
051		022-20011 - Steam pipe black Fi 28/36, L=1m	PC	•	•	•	•	•	•	•	•	•	•	•	•
052		022-20013 - Silicone hose Fi 3(inside)x4mm	PC			•	•			•	•			•	•
053		022-20015 - Silicone hose Fi9,0x3,75 mm FDA PET	PC	•	•	•	•	•	•	•	•	•	•	•	•
054	•	023-10018 - Door handle MOD 1635	PC	•	•	•	•	•	•	•	•	•	•	•	•
055	•	023-10019 - Door strike SLP42	PC	•	•	•	•	•	•	•	•	•	•	•	•
056		029-06167 - Spring fi6	PC	•	•	•	•	•	•	•	•	•	•	•	•
057		035-10002 - Filter RC KNR1512 U68 10% +100R 250VRC	PC	•	•	•	•	•	•	•	•	•	•	•	•
058		035-10004 - Ceramic resistor 110W 100E	PC	•	•	•	•	•	•	•	•	•	•	•	•
059		035-10019 - RC filter RIM 3 110/230VAC LED	PC			•	•			•	•			•	•
060		041-10001 - Rubber distance element Fi-18x8	PC	•	•	•	•	•	•	•	•	•	•	•	•
061		097-10065 - Fan cover OC-B-10	PC									•	•	•	•
062		097-30101111 - Guides OC-B-05	PC	•	•	•	•								
063		097-30101190 - Water dosing tube OC-B	PC	•	•	•	•	•	•	•	•	•	•	•	•
064		097-30101476 - Pipe cleaning assembly chamber - valve	PC			•	•			•	•			•	•
065		097-30101479 - Pipe cleaning assembly outlet valve OC-B	PC			•	•			•	•			•	•
066		097-30101481 - Pipe cleaning vertical assembly OC-B-05	PC			•	•			•	•			•	•
067		097-10105 - Pipe cleaning upper assembly OC-B	PC			•	•			•	•			•	•
068		097-30101485 - Drain cover OC-B	PC			•	•			•	•			•	•
069		097-30101718 - Dispersion water cylinder - perforated	PC	•	•	•	•	•	•	•	•	•	•	•	•
070		097-30201111 - Guides OC-B-08	PC					•	•	•	•				
071		097-30201481 - Pipe cleaning vertical assembly OC-B-08	PC							•	•				
072		097-30301111 - Guides OC-B-10	PC									•	•	•	•
073		097-30301481 - Pipe cleaning vertical assembly OC-B-10	PC											•	•
074		097-30701057 - Fan cover OC-B-05	PC	•	•	•	•								
075		097-30801057 - Fan cover OC-B-08	PC					•	•	•	•				
076		098-22002081 - Hinge shaft top	PC	•	•	•	•	•	•	•	•	•	•	•	•
077		098-30102100 - Teflonized inside glass strike	PC	•	•	•	•	•	•	•	•	•	•	•	•
078		098-30102403 - Door positon upper fi25*12	PC	•		•		•		•		•		•	
079		098-10004 - Cleaning nozzle with thread OC-B	PC			•	•			•	•			•	•
080		098-30102409 - Housing of motor shaft sealing	PC	•	•	•	•	•	•	•	•	•	•	•	•
082		098-10003 - Sealing nut upper OC-B	PC			•	•			•	•			•	•
083		098-30402403 - Door positon upper left fi25*12	PC		•	•		•		•		•		•	
084		098-5002070 - Inside door hinge fi13*10 OC-B	PC	•	•	•	•	•	•	•	•	•	•	•	•
085		098-5002076 - Teflonized distance element fi22	PC	•	•	•	•	•	•	•	•	•	•	•	•
086		098-5002138 - Steaming nozzle d=1,2	PC	•	•	•	•	•	•	•	•	•	•	•	•
087		098-6302146 - Sensor screw	PC	•	•	•	•	•	•	•	•	•	•	•	•
088	•	099-16001064 - Electronic controller - S-Control	PC	•	•	•	•	•	•	•	•	•	•	•	•
089	•	099-16001067 - Front panel ETP16290	PC	•	•	•	•	•	•	•	•	•	•	•	•
090		099-30101455 - Lower hinge shaft right	PC	•		•		•		•		•		•	
091		099-30101604 - Glass inside assembly OC-B-05	PC	•	•	•	•	•	•	•	•	•	•	•	•
092		099-30101605 - Glass outside assembly OC-B-05HTB,FB,FBS	PC	•	•	•	•	•	•	•	•	•	•	•	•
093		099-30201604 - Glass inside assembly OC-B-08	PC	•	•	•	•	•	•	•	•	•	•	•	•
094		099-30201605 - Glass outside assembly OC-B-08HTB,FB,FBS	PC					•	•	•	•	•	•	•	•
095		099-30301604 - Glass inside assembly OC-B-10	PC									•	•	•	•
096		099-30301605 - Glass outside assembly OC-B-10HTB,FB,FBS	PC									•	•	•	•
097		099-30401455 - Lower hinge shaft left	PC		•		•		•		•		•		•


OVEN FRONT VIEW

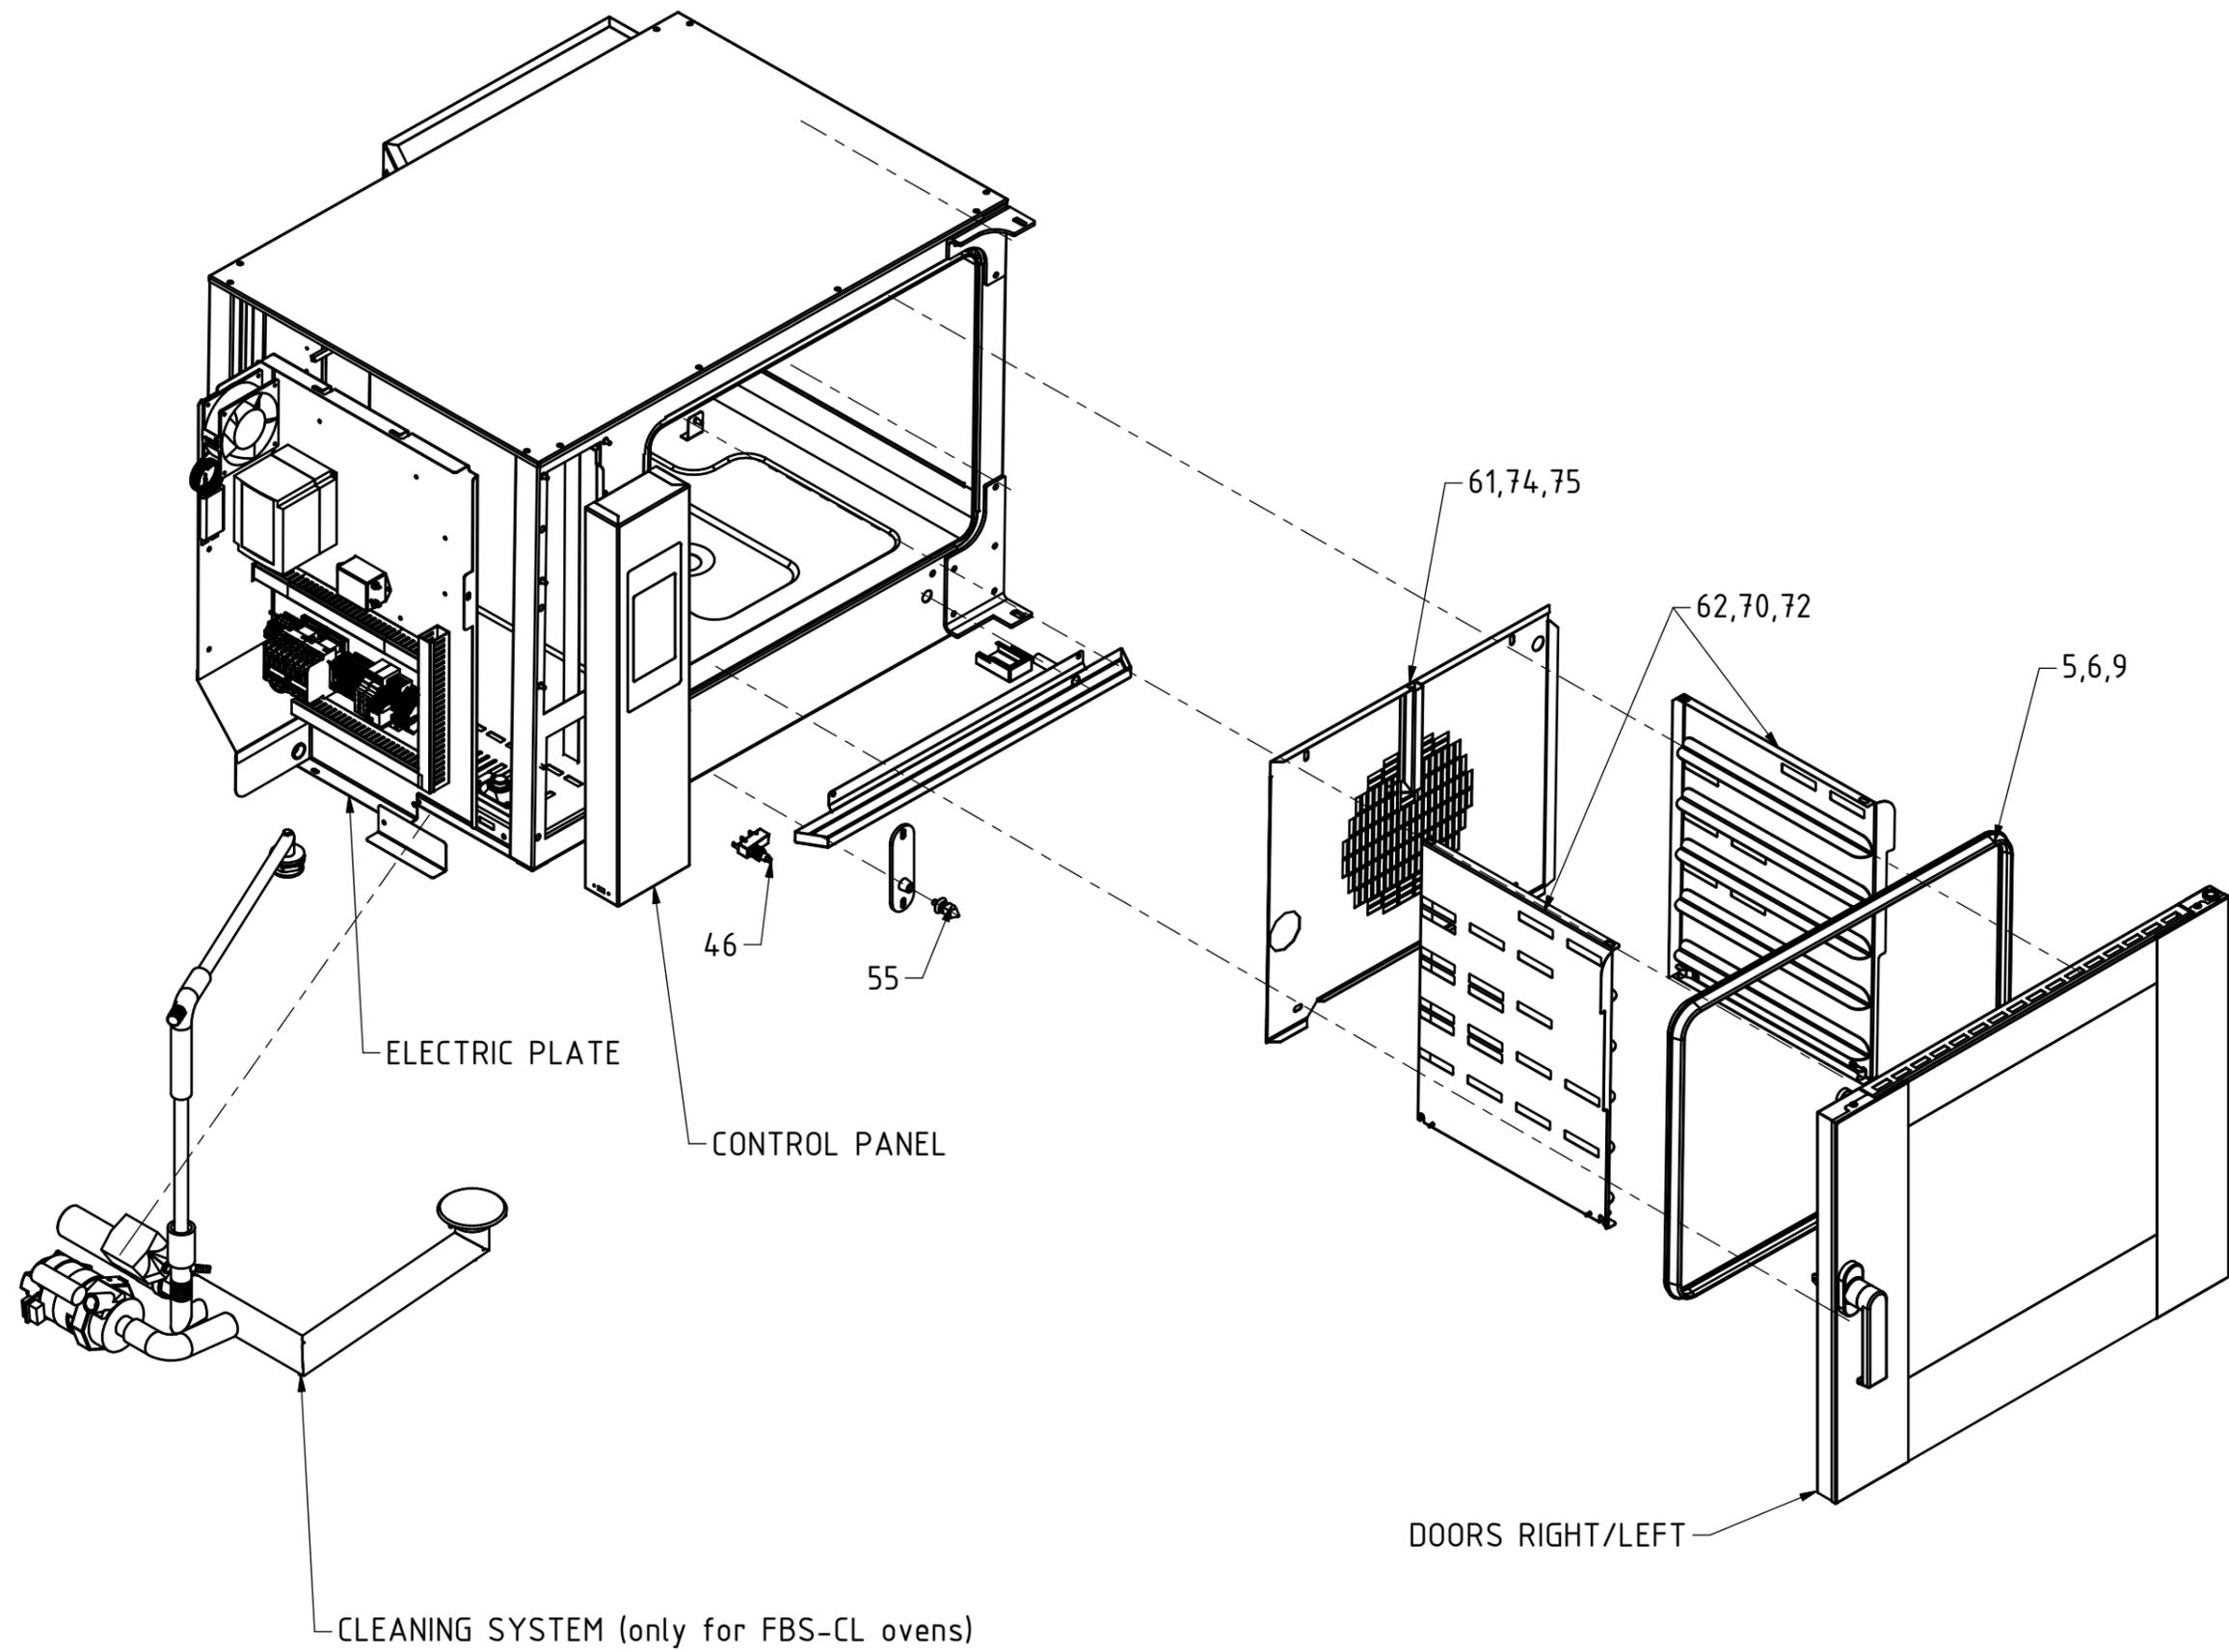

OVEN BACK VIEW

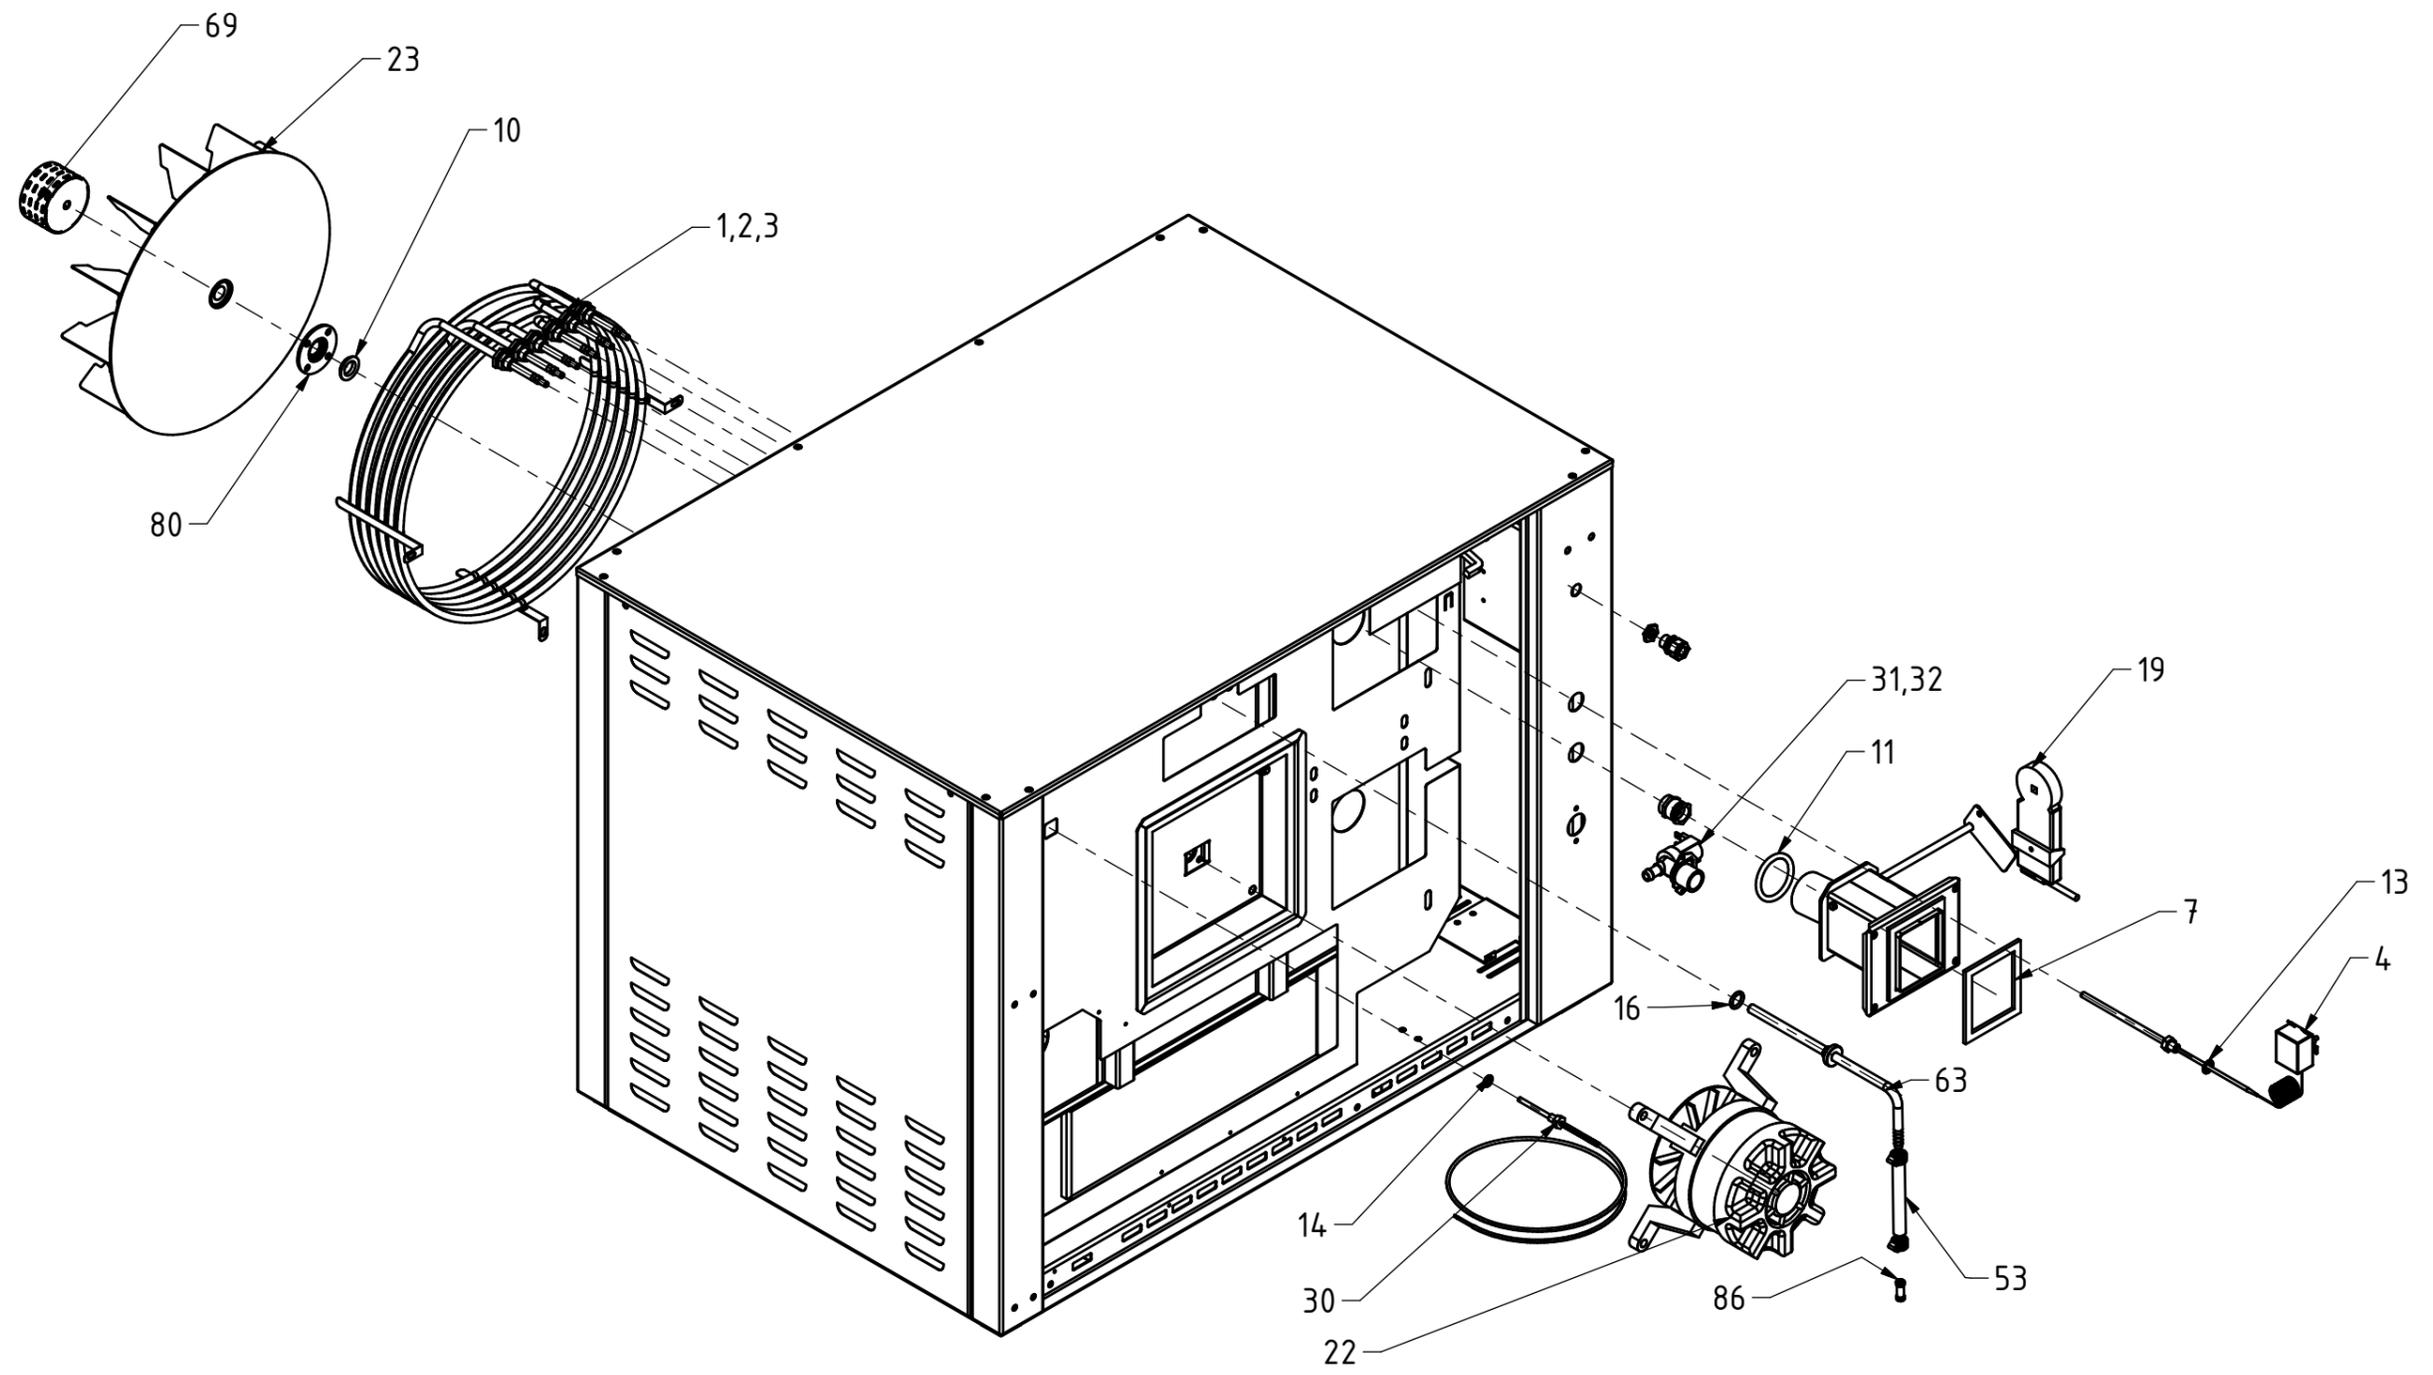


DOORS RIGHT

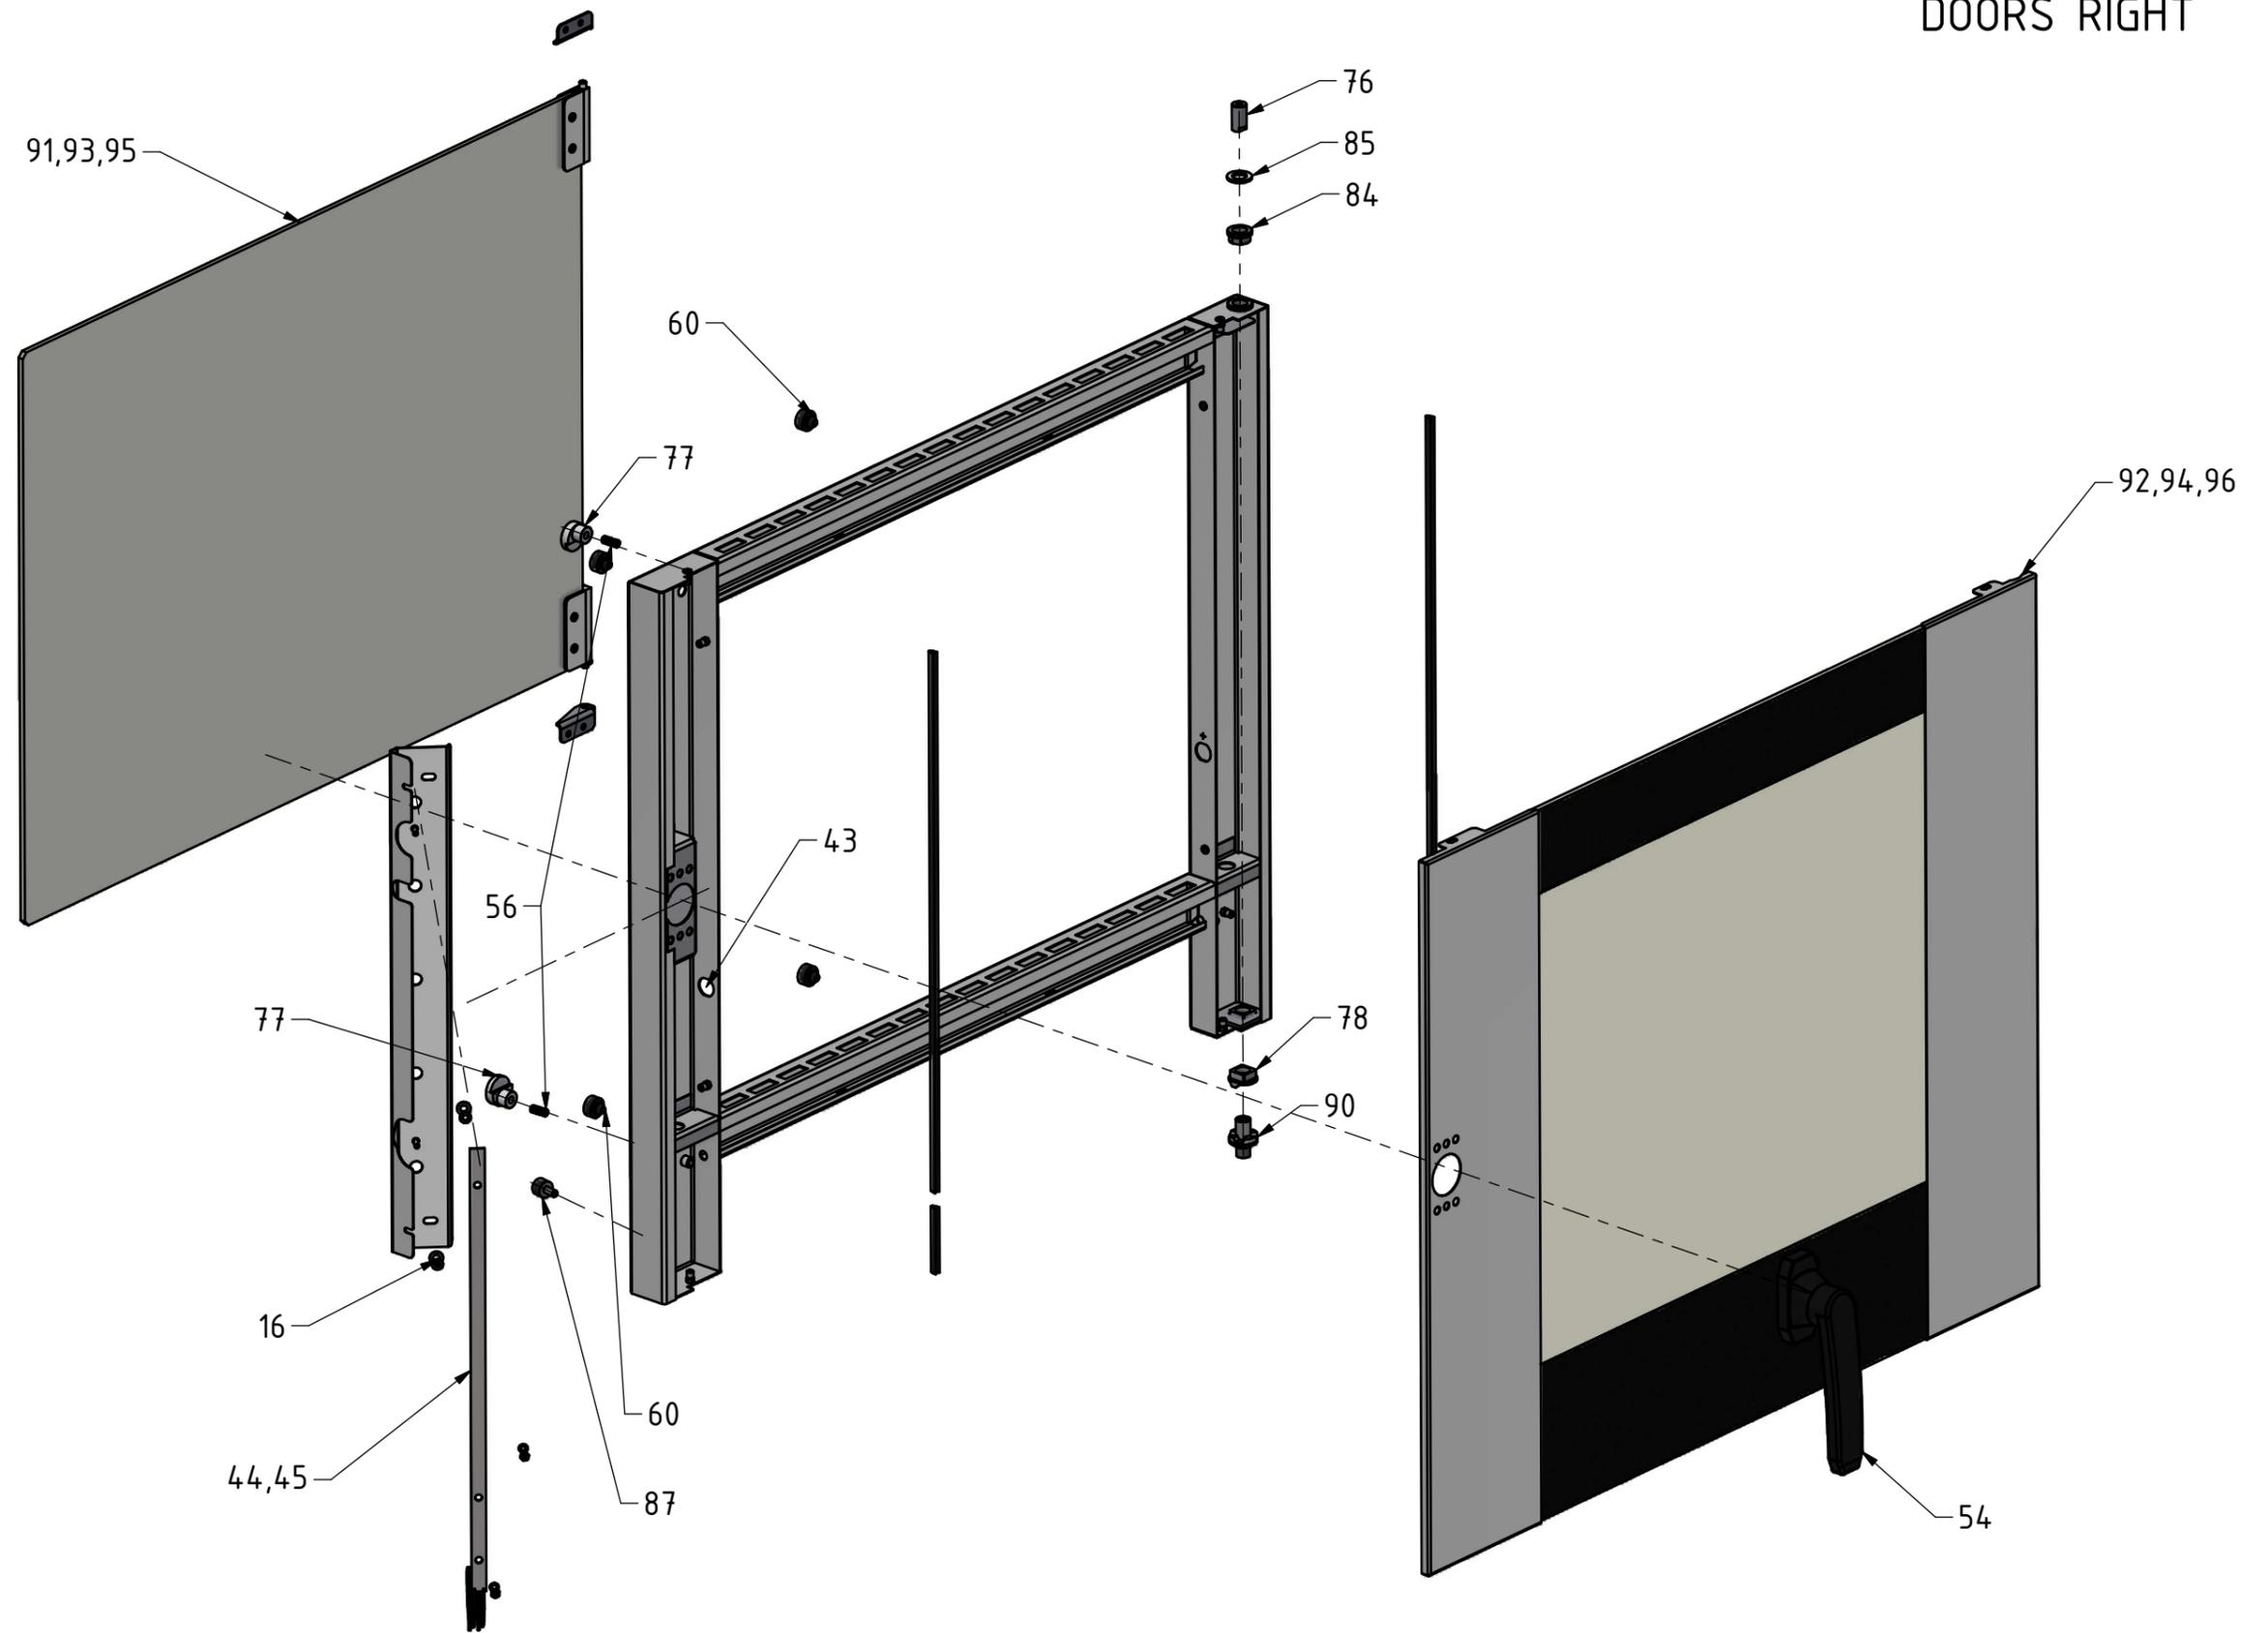


NOTE:
Position 78 needs to be cut out of the door
in case of replacement.

DOORS LEFT

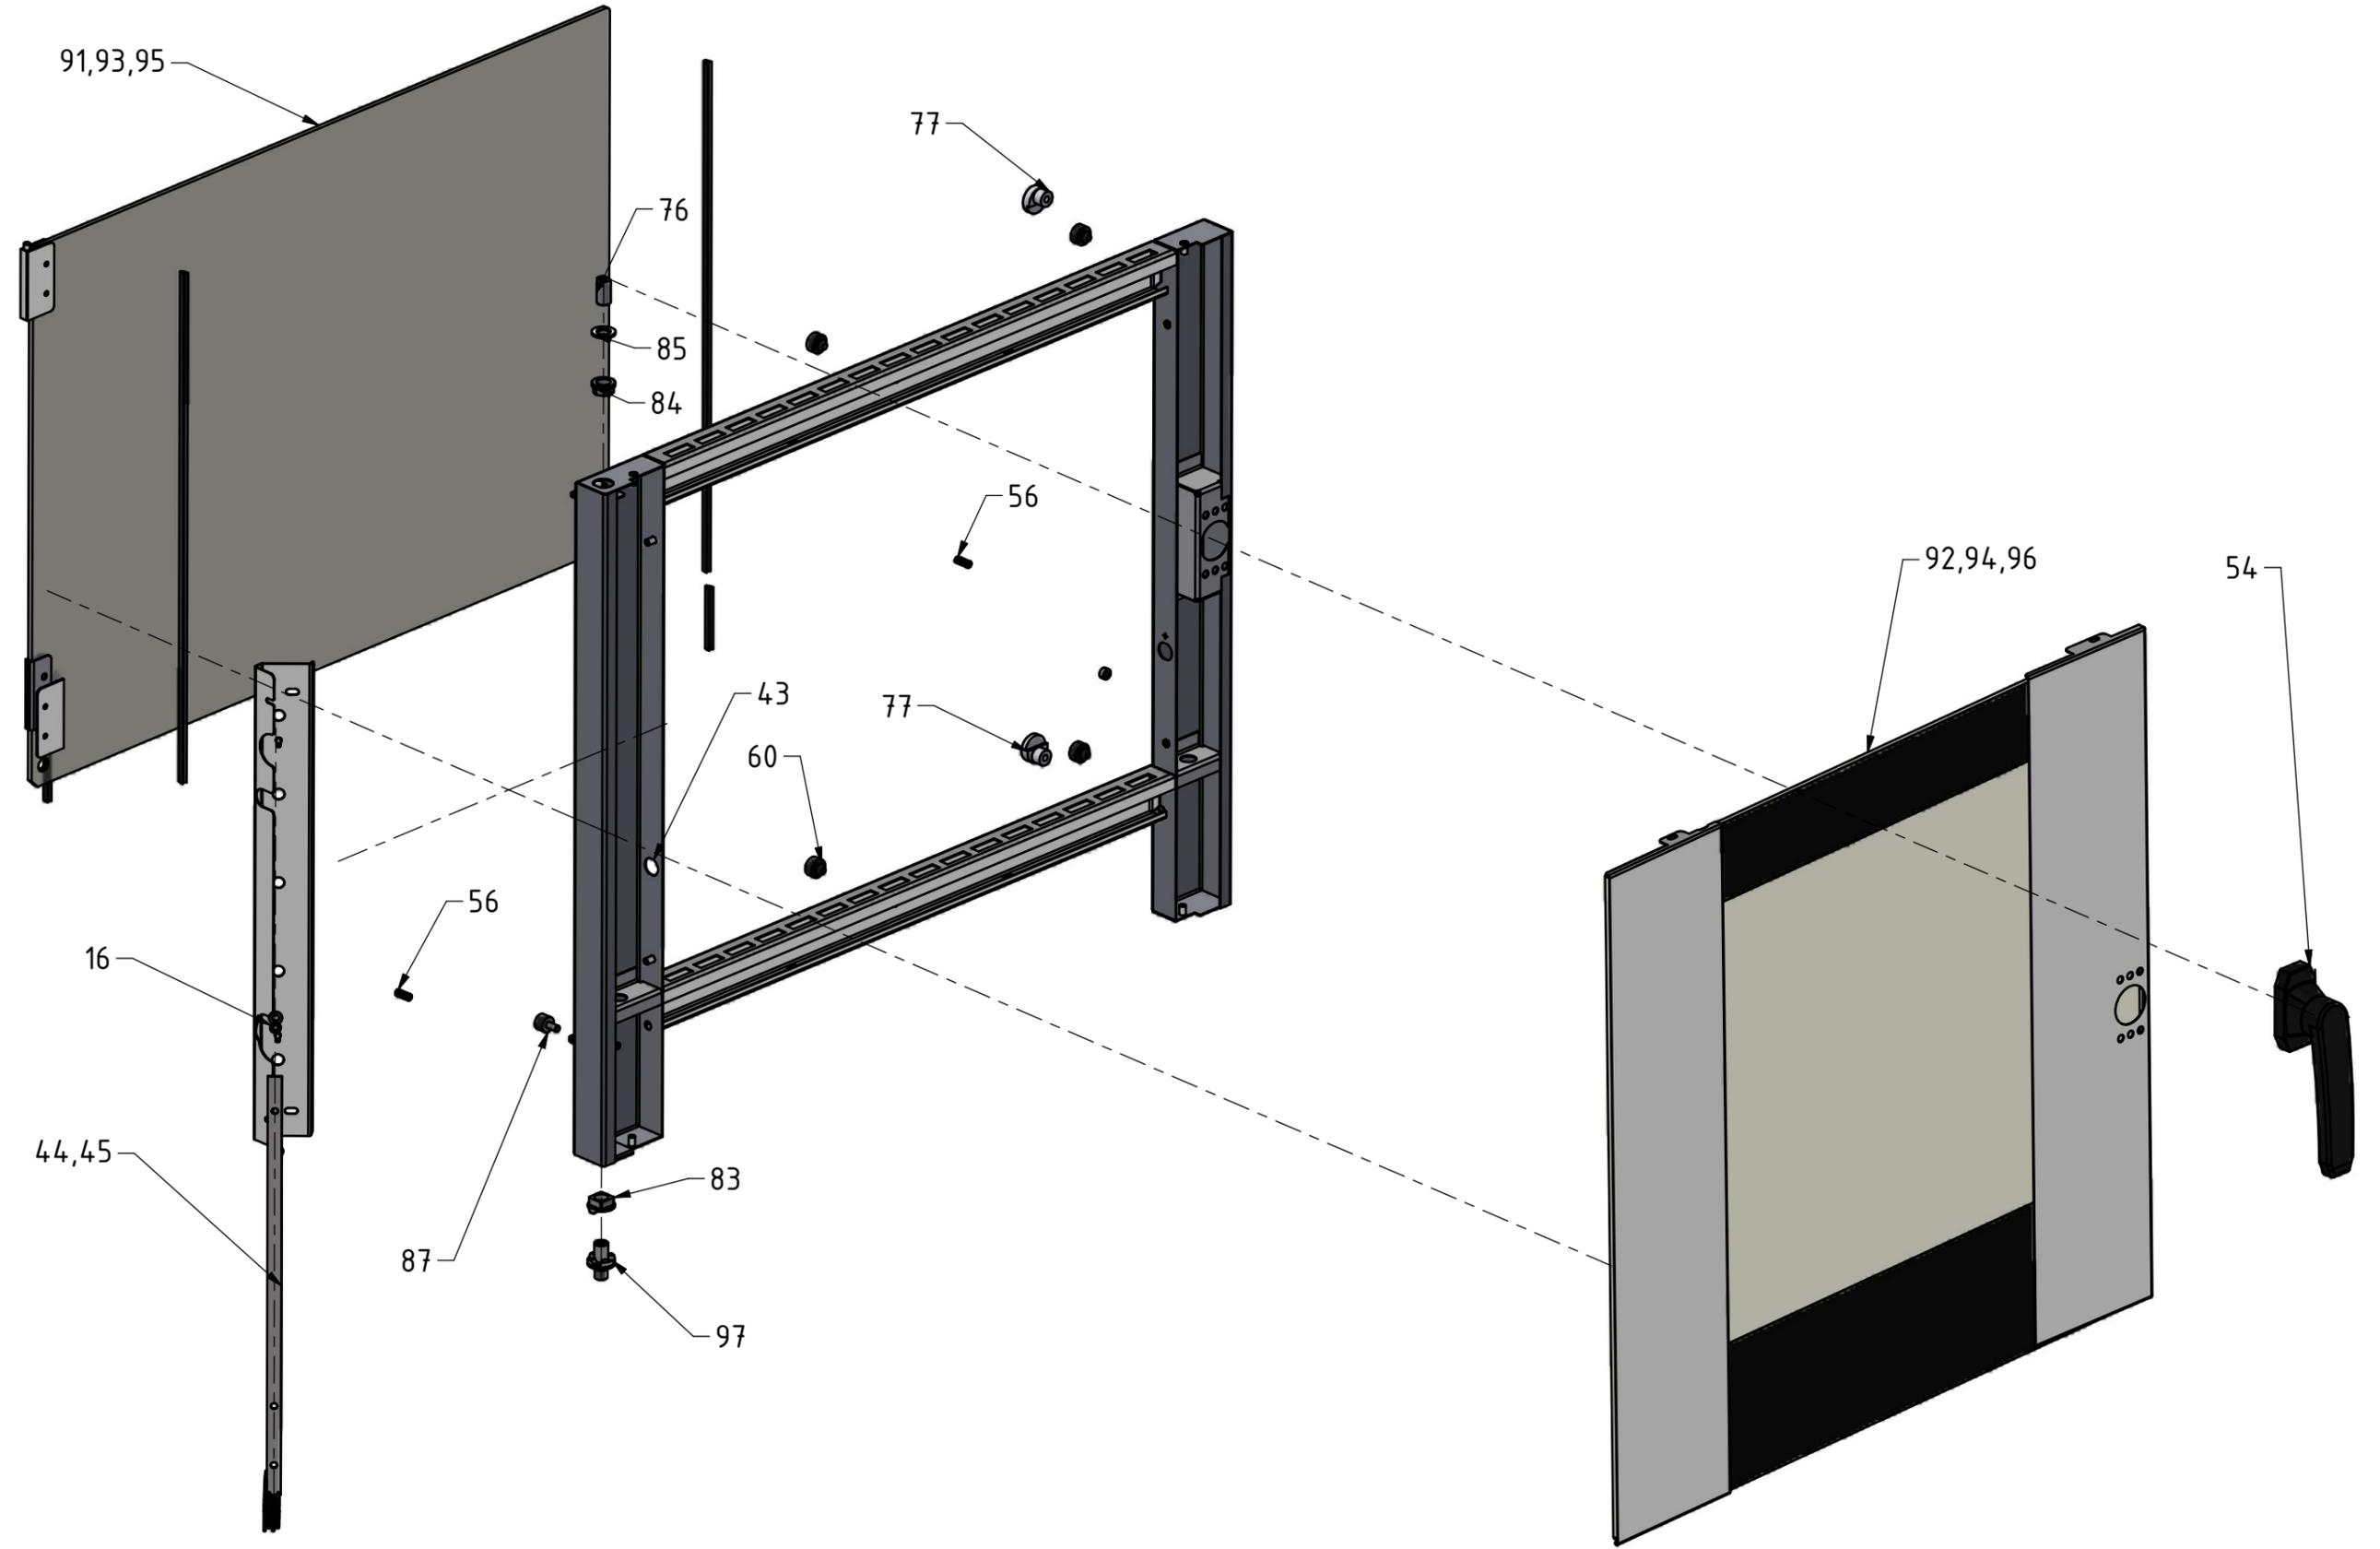


NOTE:
Position 83 needs to be cut out of the door
in case of replacement.

ELECTRIC PLATE

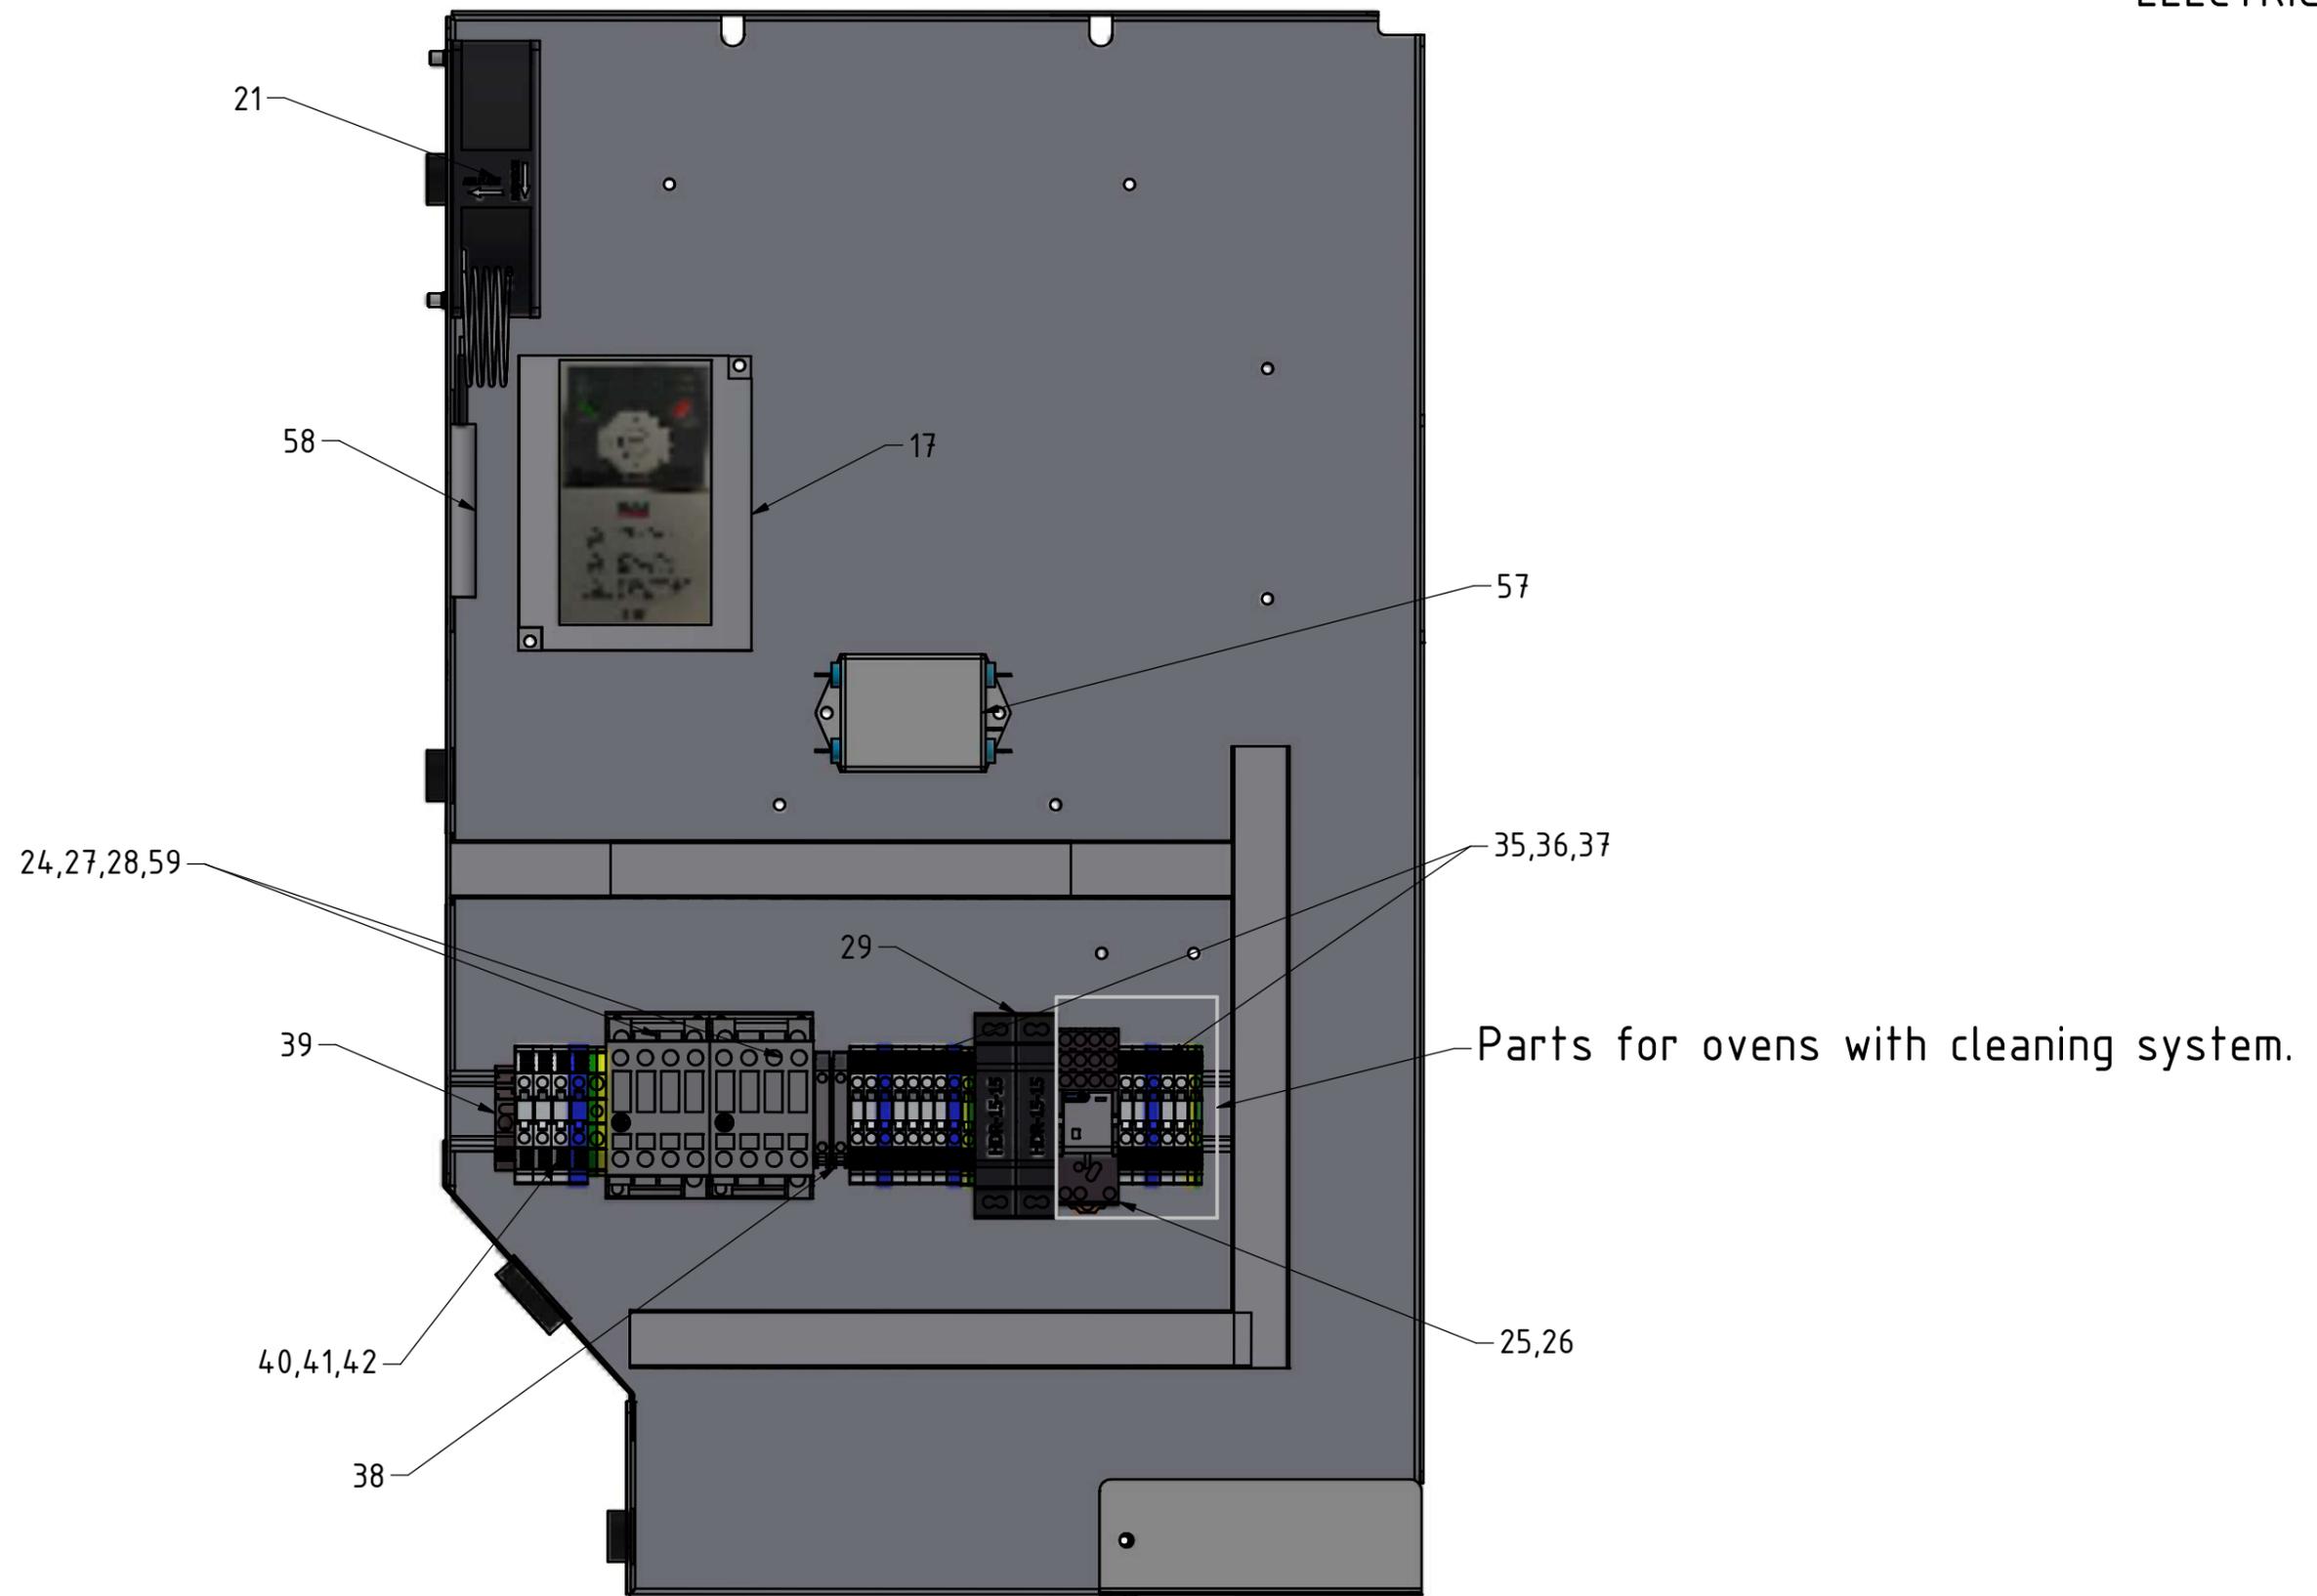

CONTROL PANEL

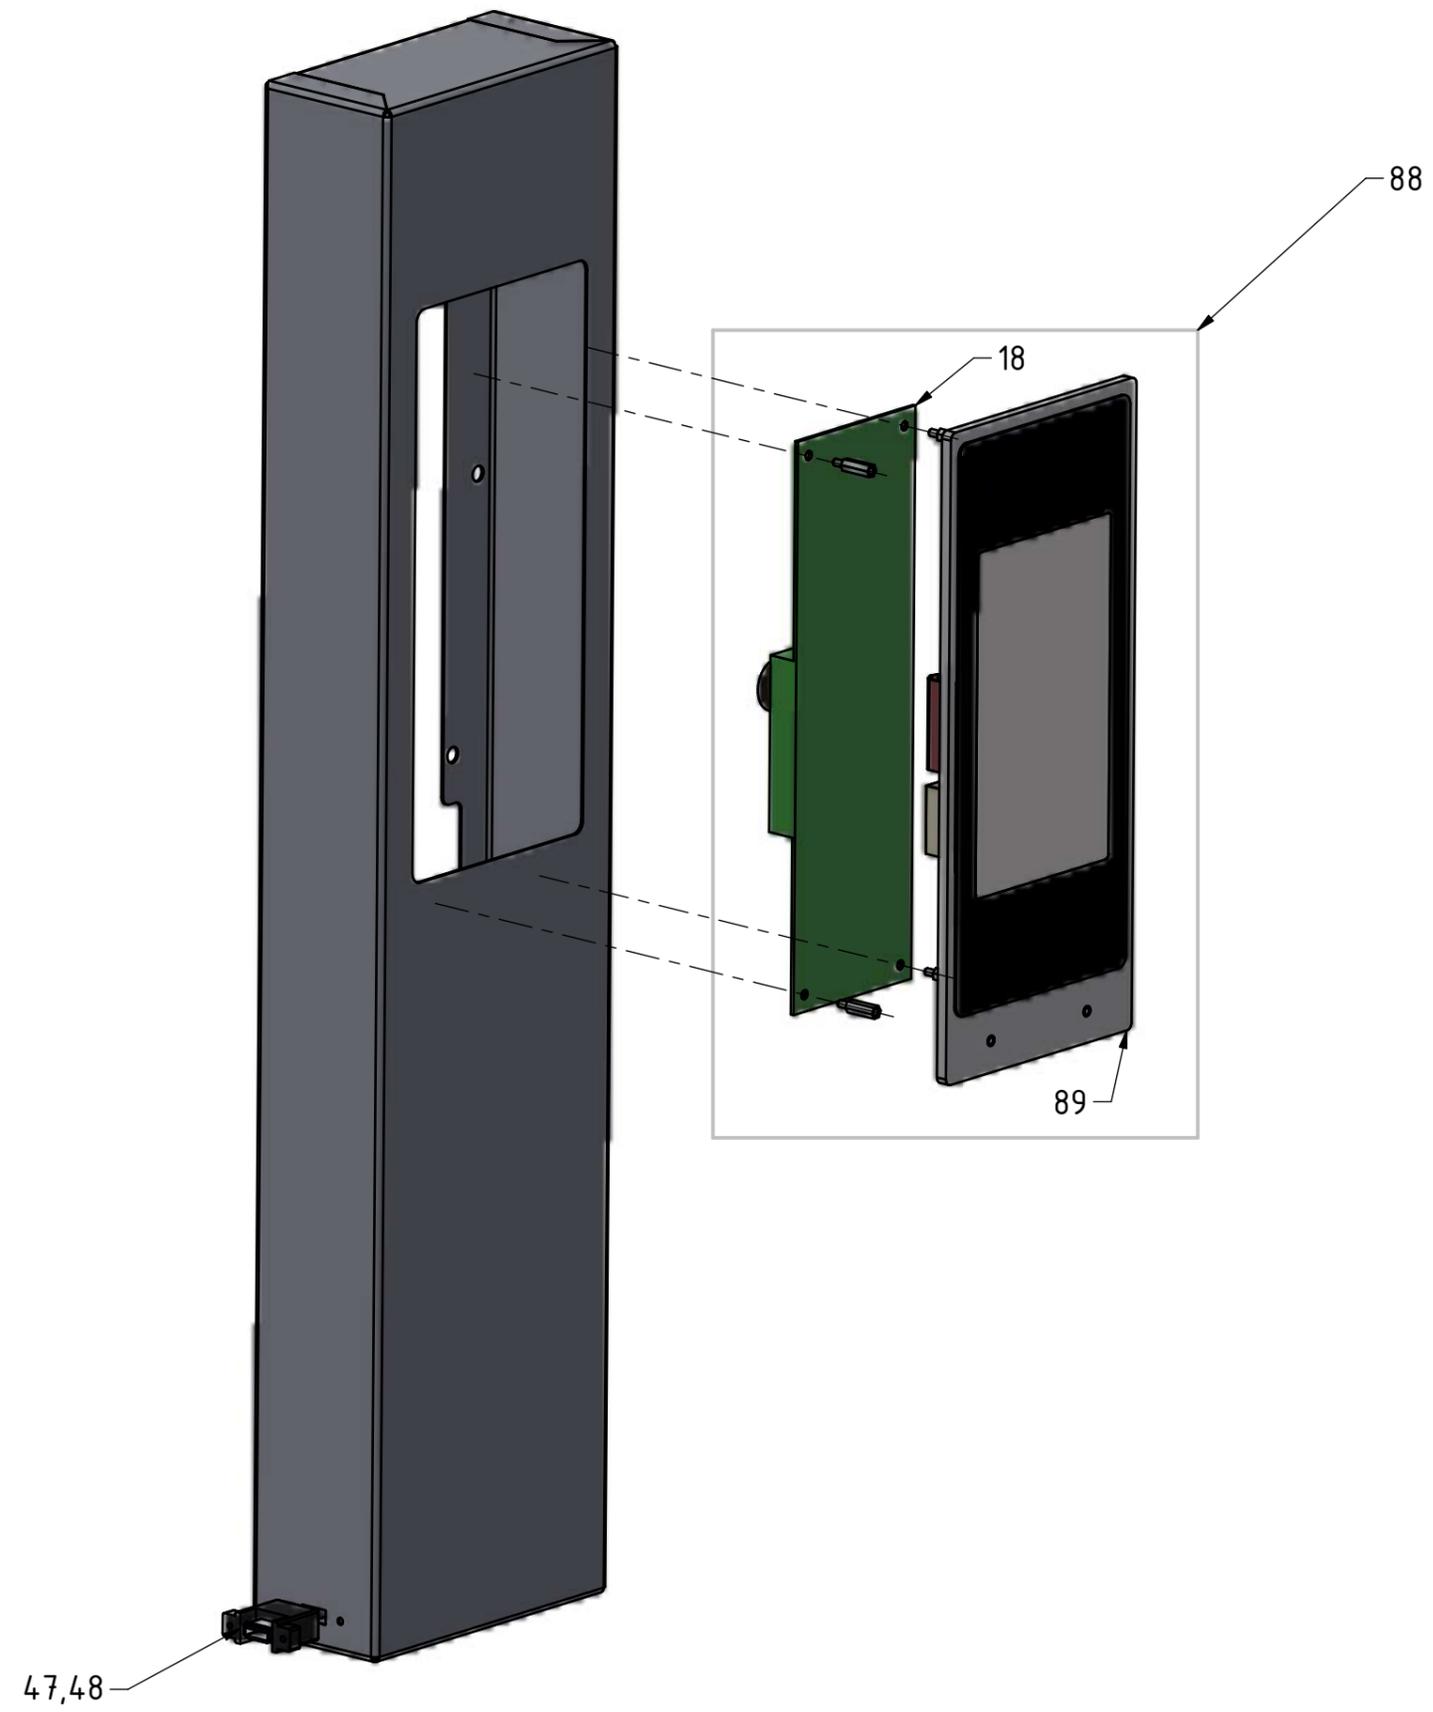

CLEANING SYSTEM

